
FIG.1 PRIOR ART

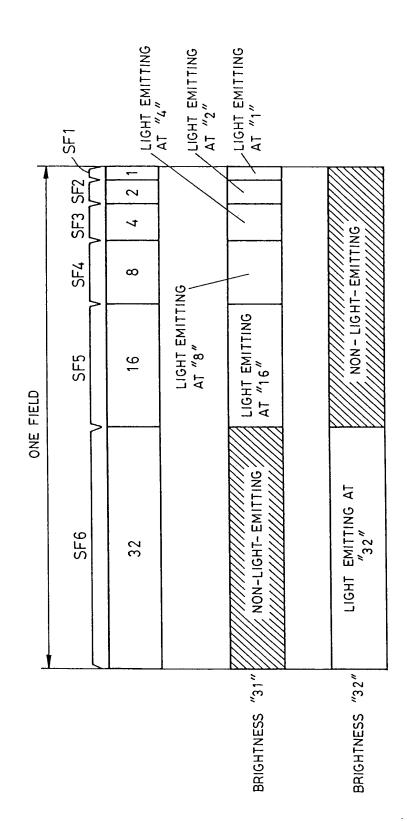

3/54

F16.3

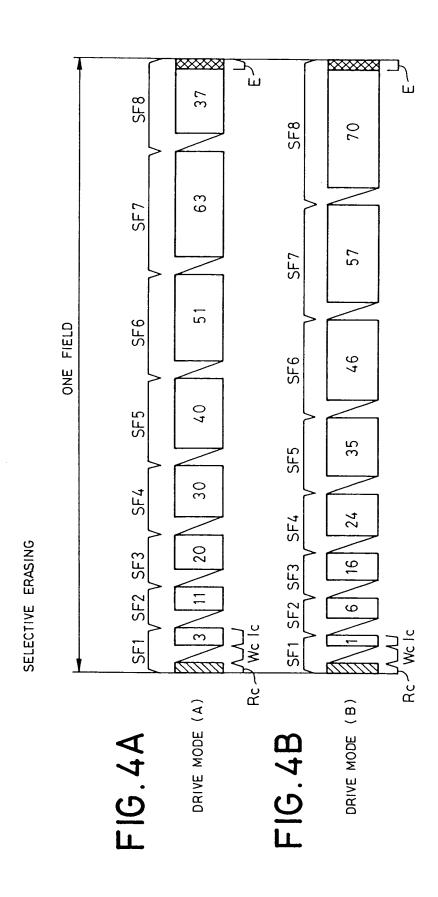


FIG.5

SELECTIVE ERASING

GRAY SCALE ~	_	S F 1	S F 2	S F 3	S F 4	S F 5	S F 6	S F 7	S F 8	LA	LB	BRIGHTNESS OF LIGHT-EMISSION
	1									0	0	
	2	\bigcirc	•							3	1	
•	3	\bigcirc	0							14	7	
	4	\bigcirc	\bigcirc	\bigcirc	•					34	23	
	5	\bigcirc	\bigcirc	\bigcirc	0					64	47	
	6	\bigcirc	\bigcirc	\bigcirc	0	\bigcirc				104	82	
	7	0	\bigcirc	\bigcirc	0	\bigcirc	\bigcirc			155	128	
	8	0	0	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc		218	185	
,	9	\bigcirc	0	255	255							

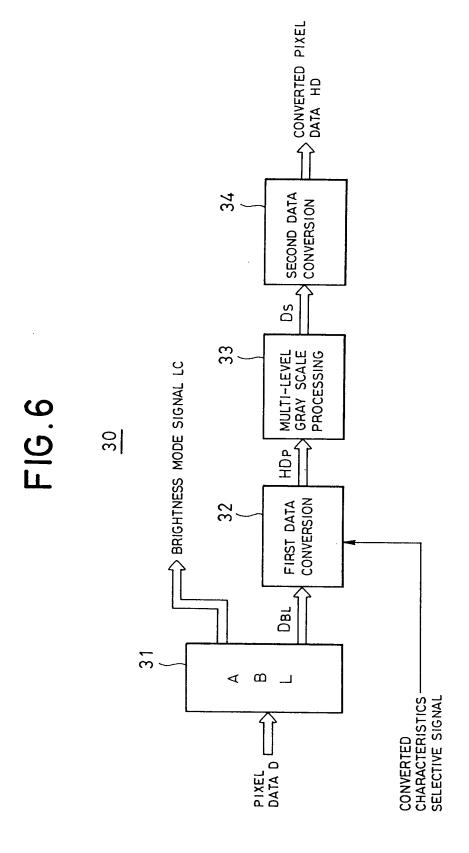


FIG.7

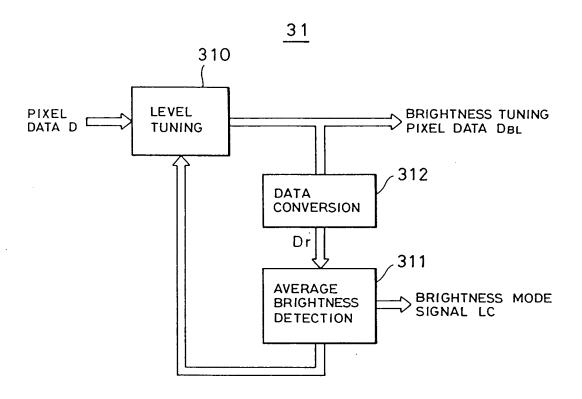


FIG.8

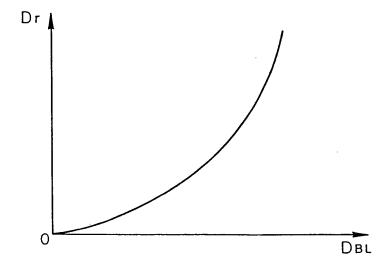


FIG.9A

DRIVE MODE (A)

LC /	SF1	SF2	SF3	SF4	SF5	SF6	SF7	SF8
MODE 1	3	11	20	30	40	51	63	37
MODE 2	6	22	40	60	80	102	126	74
MODE 3	9	33	60	90	120	153	189	111
MODE 4	12	44	80	120	160	204	252	148

FIG.9B

DRIVE MODE (B)

LC	SF1	SF ₂	SF3	SF4	SF5	SF6	SF7	SF8
MODE 1	1	6	16	24	35	46	57	70
MODE 2	2	12	32	48	70	92	114	140
MODE 3	3	18	48	72	105	138	171	210
MODE 4	4	24	64	96	140	184	228	280

FIG.10

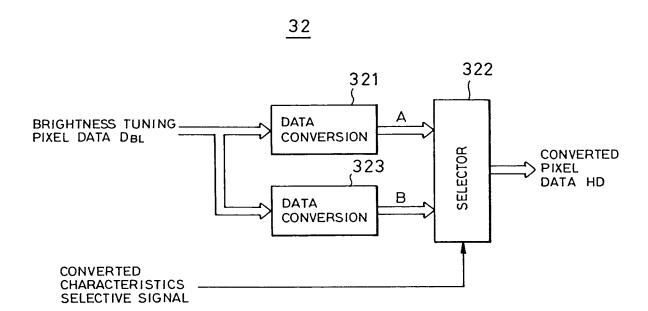


FIG.11


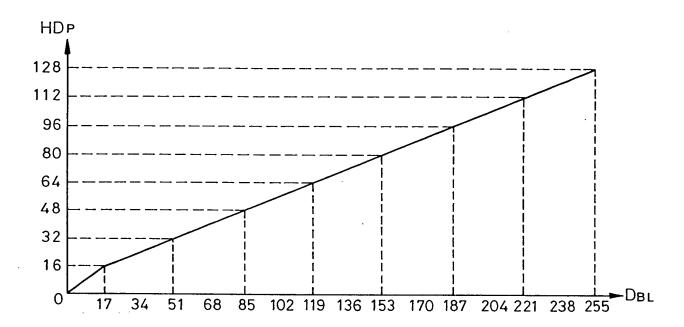


FIG.12

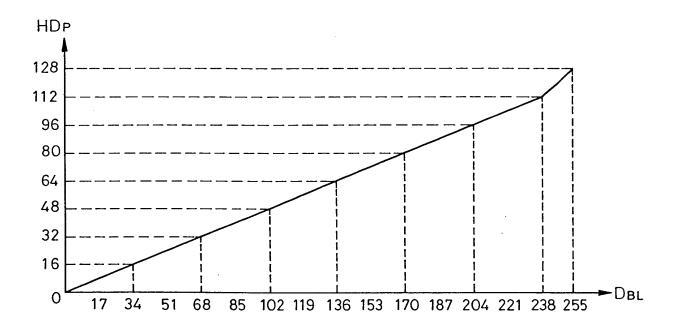

Level Dat				 				
Q. 00000000	LEVEL	DBL	Α	В		DBI	Α	B
1 00000001 00000000 00000000 65 01000001 0010010 0000111	0	0000000		0000000	64			
2 00000010 00000011 00000000								
3 00000011 00000010 00000001 67 01000011 00100111 00001111 00000111 00000010 00000001 00000010 00000010 00000010 00000010 00100000 00100000 001000000 0010000000 00100000000	-							
4 00001101 00000101 00000101 69 01000101 00101000 00100000							00100111	00011111
S					67	01000011	00100111	00011111
S				00000001	68	01000100	00101000	00100000
6 00000110 00000101 00000010 70 01000110 00101000 01000001	5		00000100	00000010	69	01000101		
7 00000111 00000110 00000011 72 0100011 0010010 00100001	6	00000110	00000101					
B 00001000 000001011 00000101 72 01001001 00101010 00100010 10 00001010 00001010 00000100 73 01001001 00101010 00100010 11 00001011 00001011 00000101 00001011 00001011 00101011 00100011 12 00001101 00001011 00000101 75 01001011 00101011 00100011 13 00001101 00000110 00000110 76 01001100 00101011 00100011 13 00001101 00000110 76 01001100 00101010 001000011 13 00001101 00000110 76 01001100 00101010 00100011 14 0000111 00000110 76 01001110 00101100 00100010 15 00001111 00000110 78 01001110 00101100 00100100 15 00001111 00000111 00000111 78 01001110 00101100 00100100 15 00001111 00000111 00000111 78 01001111 00101100 00100101 15 00000111 00000111 00000111 80 0101000 0010101 0010101 17 00010000 00001101 00000111 80 01010000 0010101 0010101 17 00010000 00001000 82 0101000 0010101 00100101 18 0010000 00010000 00001000 82 0101001 0010111 0010011 19 0001001 0001000 00001000 82 0101010 0010111 0010011 19 0001010 0001000 00001000 83 0101001 0010111 0010011 12 0001010 0001000 00001001 84 0101010 0010111 0010011 12 00010110 0001001 00001001 85 0101010 001111 0010011 12 0001011 0001001 00001001 85 0101010 00110100 0010100 00010100 22 00010110 00010010 00001010 85 0101011 0011000 00101000 00010100 22 00010110 00010101 00001011 86 0101010 0011000 00101000 00101000 00101000 00101000 00101000 00101000 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101	7							
9 00001001 00001000 00001000 73 01001001 00110101 00100010 10 00001001 10 00001001 00001001 00001001 75 01001011 00100101 001000101 12 00001101 00000101 00001011 75 01001011 00100101 00100011 13 00001101 00001101 00000101 76 01001101 00100101 00100101 13 00001101 00001101 000001101 77 01001101 00100101 00100101 14 00001110 00001101 00000110 78 01001101 00101100 001001001 14 00001110 00001101 00000110 78 01001101 00101100 001001001 15 00001110 00001111 00000111 79 01001111 00101101 00100101 15 00001000 00001101 00000111 79 01001101 00100110 16 0000000 00001101 00000111 79 01001101 00100110 17 00010001 00010000 00001000 81 01010000 00101110 00100101 18 00010010 00010000 00001000 82 01010001 00101110 00100101 18 00010010 00010000 00001000 83 01010010 00101111 00100111 20 00010010 00010001 00001001 84 0101001 00101111 00100111 20 00010100 00010001 00001001 85 0101011 00110000 00101000 22 00010110 00010010 00001010 85 0101011 00110000 00101000 23 00010110 00010010 00001010 85 0101011 00110000 00101000 24 00011001 00010011 00001011 88 0101001 00110000 00100001 26 00011001 00010011 88 0101001 00110000 00101000 26 00011010 00010111 00010111 89 0101011 00110001 00101001 27 00011011 00010111 00010101 00001010 00	8				-			
10 00001010 00001001 00000100 74 01001010 00101010 00100011 12 00001011 000001011 00000101 75 01001010 00101011 00100001 13 00001101 00100011 00100011 13 00001101 000001101 00000110 77 01001101 00101101 00100011 14 00001110 00001101 00000110 78 01001110 00101100 001001100 14 00001110 000001101 00000110 78 01001110 00101101 001001101 15 00001111 00001111 00000111 79 01001111 00101101 00100101 15 00001111 00001111 00000111 79 01001111 00101101 00100101 17 000000 00001110 00000110 18 0010000 00001000 00001000 18 01010000 00101010 00100101 17 00010010 00010000 00001000 00001000 18 01010010 00101111 00100110 18 00010011 00010000 00001000 00001000 18 01010010 00101111 00100111 19 00010011 00010001 00001001 00010010 18 01010010 00101111 00100111 12 00010101 00010001 00001001 18 0101010 00101011 0010011 12 00010101 00010001 00001001 18 0101010 00101010 00100101 12 00010111 00010010 00001010 18 0101010 00101000 00100100 00001010 18 0101010 0010000 00100010 00001010 0		00001001						
11								
12								
13 00001101 00001101 00000110 77 01001101 00101100 00100100								
14 00001110 00001101 00000110 78 01001110 00101100 00100100 16 00001010 00001111 00000111 79 01001111 00101101 00100101 17 00001000 00001111 00000111 00001011 00101101 00100101 17 00001001 00001000 00001000 81 01010000 00101110 00100110 18 00010010 00010000 00001000 81 01010001 00101110 00100110 19 00010011 00010000 00001000 83 01010011 00101111 00100110 19 00010011 00010000 000010001 83 01010011 00101111 00100111 19 00010011 00010000 000010001 83 01010011 00101111 00100111 21 00010101 00010001 00001001 84 0101010 00101111 00100111 22 00010101 00010001 00001001 85 01010101 00110000 001001000 22 00010110 00010010 00001010 86 01010110 00110000 001001000 23 00010111 00010010 00001010 87 0101011 00110000 00101000 24 00011000 00010011 00001011 88 01010110 00110000 00101000 24 00011001 00010011 00001011 88 01011001 00110001 00101001 26 00011010 00010011 00001011 88 01011010 00110001 00101001 26 00011010 00010100 00001100 90 01011010 00110010 00101010 27 00011011 00010101 000011010 90 01011010 00110010 00101010 28 00011100 00010101 000011010 90 01011010 00101011 00101010 28 00011100 00010101 00001101 90 00011001 001010101								00100011
15 00001111 00001110 00000111 79 01001111 00101101 00100101 17 00010001 00001000 00001101 00001000 00001000 00001000 00010101 00101101 00100101 18 00010010 00010000 00001000 00001000 020 0101010 00101110 00100110 18 00010010 00010000 00001000 020 0100101 00101111 00100111 20 0001001 00010001 00001000 00001000 020 0100101 00101111 00100111 20 0001001 00010010 00001001 00010010 00010000 00010000 00010000 00010000 00010000 00010000 00010000 00010000 00010							00101100	00100100
15 00001111 00001110 000000111 79 01001111 00100101 00100101 17 00010000 00001111 80 01010000 00101110 001001010 17 00010001 00010000 000010000 81 01010001 00101110 00100110 18 00010010 00010000 00001000 82 01010010 00101110 00100110 19 00010011 00010001 00001000 00001000 82 01010010 00101111 00100111 20 0001001 00010010 00001001 84 01010100 00101111 00100111 21 00010101 00010010 00001001 84 01010100 00101011 00100101 22 00010110 00010010 00001001 85 0101011 00110000 00101000 22 00010110 00010010 00001010 85 0101011 00110000 00101000 23 0001011 00010011 00001011 87 01010111 00110000 00101000 24 00011000 00010110 00001011 87 01010111 00110000 00101000 25 00011000 00010011 00001011 88 01011001 00110010 00101001 25 00011001 00010101 00001011 89 01011001 00110010 00101001 27 00011011 00010101 00001010 91 01011010 00110101 00101010 27 00011011 00010101 00001101 91 0101101 00110010 00101010 28 00011101 00010101 00001101 93 0101101 00110010 00101010 28 00011101 00010101 00001101 94 0101101 0011011 00101011 29 00011101 00010111 00001110 94 0101101 00101011 00101011 33 00011111 00010111 00001111 94 0101101 00101011 00101101 33 0001001 00010110 00001110 95 0101111 00110110 00101101 34 0010010 00101010 00010101 36 0100010 00010100 0001000 98 0110001 00110101 00101101 36 0100010 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010101 00010011 00010011 00010011 00010011 00010011 00010011 00010011 00010011 00010011 00010001	14	00001110			78	01001110	00101100	00100100
16	15		00001110	00000111	79			
17 00010001 00010000 00001000 81 01010011 00101110 00100110 18 00010011 00010010 00001000 82 01010010 00101110 00100111 19 00010011 00010010 00001000 83 01010011 00101111 00100111 20 0001010 0001001 00001001 84 01010100 00101111 00100111 21 00010101 00010001 00001001 84 01010100 00101111 00100111 22 00010110 00010010 00001001 85 01010101 00110000 00101000 22 00010110 00010010 00001010 86 0101010 00110000 00101000 23 00010111 00010011 00001010 86 0101010 00110000 00101000 24 00011000 0001011 00001011 88 01011000 00110000 00101000 25 00011001 00010011 00001011 88 01011000 00110001 00101001 25 00011001 00010111 00001011 88 01011000 00110001 00101001 26 00011010 00010100 00001100 90 01011010 00110001 00101010 27 00011011 00010100 00001100 90 01011010 00110010 00101010 27 00011011 00010110 00001100 91 01011011 00110010 00101010 28 00011101 00010110 00001101 92 01011100 00110011 00101010 00001101 29 00011101 00010110 00001101 93 01011101 00110011 00101011 29 00011101 00001110 00001110 94 01011111 00110011 00101011 30 00011111 00010111 00001111 95 01011111 00110110 00101101 33 00100001 00010110 00001101 95 01011111 00110110 00101101 34 0110000 0011000 00101100 00101100 00101101 36 0110010 00101101 00101101 36 0110010 00101101 00101101 37 0010001 00101101 00011111 96 0110000 00110101 00101101 36 0110010 00110101 00101101 37 0010001 00011000 00010000 98 01100010 00110110 00101101 00101101 00101101 00101101 00101101 00101101 00101010 0	16	00010000						
18	17		00010000					
19 00010011 0001000 00001000 33 01010011 00101111 00100111 20 00010100 0001001 00001001 84 01010100 000101111 00100111 21 00010101 00010001 00001001 85 01010101 00110000 00101000 22 00010110 00010010 00001010 86 0101010 00110000 00101000 23 00010111 00010010 00001010 86 0101010 00110000 00101000 24 00011000 0001011 00001011 88 01011000 00110000 00101000 24 00011000 0001011 00001011 88 01011000 00110001 00101001 25 00011001 00010011 00001011 88 01011000 00110001 00101001 25 00011001 00010101 00001011 88 01011000 00110001 00101001 26 00011010 00010100 00001100 90 01011010 00110001 00101010 27 00011011 00010100 00001100 90 01011011 00110010 00101010 27 00011011 00010101 00001100 90 01011011 00110010 00101010 28 00011101 00010101 00001101 92 01011100 00110011 00101011 29 00011101 00011101 00001101 93 01011101 00110101 00101011 33 00011111 00010110 00001110 94 01011110 00110101 00101101 32 00110101 00001111 00001111 94 01011110 00110100 00101100 32 00100000 00010111 00001111 96 01100000 0011001 00101100 32 00100000 00010111 00001111 97 01100000 00110101 00101101 33 00100010 00011010 00010000 99 01100010 00110101 00101101 35 00100101 00011001 00010000 99 01100010 00110101 00101101 36 0010010 00011000 00010000 99 01100010 00110101 00101101 37 00100101 00011010 00011010 00110101 00101010 00100101 00100101 00100101 00100101 00100101 00100101 00100101 00100101 00100101 0010000 00100000 99 01100010 00110101 00100101 00100000 00100000 99 01100010 001000101 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000 00100000								
20								
21 00010101 0001001 00001001 85 01010101 00110000 00101000 22 00010110 00010101 00001010 86 01010110 00110000 00101000 23 00010111 00010010 00001011 87 01010111 00110000 00101000 24 00011000 00010111 00001011 88 01011000 00110001 00101001 25 00011001 00010011 00001011 88 01011000 00110001 0010001 25 00011001 00010011 000010101 89 01011010 00110001 00101001 26 00011010 00010100 00001100 90 01011010 00110010 00101010 27 00011011 00010101 00001100 90 01011010 00110010 00101010 28 00011100 00010101 00001101 92 01011101 00110011 00110110 29 00011101 00010101 00001101 92 01011101 00110011 00101011 29 00011101 00010101 00001101 93 0101101 00110011 00101011 30 00011111 00010110 00001110 94 01011111 00110101 00101100 31 00011111 00001110 00001110 95 01011111 00110100 00101100 32 00100000 00010111 00001111 96 01100000 00110101 00101101 33 00100001 00010111 00001111 96 01100000 00110101 00101101 34 0010001 00010111 00001111 96 01100000 00110101 00101101 35 00100011 00011011 000010111 96 01100000 00110101 00101101 36 00100100 00011000 00010000 98 01100011 00101011 00101110 36 00100100 00011000 00010000 99 0110001 00110110 00101101 00101101 37 00100101 00011000 00010000 00011000 00110010 0011								
22 00010110 00010010 00001010 86 01010110 00110000 00101000 23 000101011 00010101 00001010 87 01010111 00110000 00101001 25 00011001 00010011 00001011 88 01011001 00110001 00101001 25 00011001 00010101 00001011 89 01011001 00110001 00101001 26 00011011 00010100 00001100 90 01011010 00110010 00101001 27 00011011 00010100 00001100 90 01011011 00110010 00101010 28 00011101 00010101 00001100 91 01011011 00110010 00101010 28 00011101 00010101 00001101 92 01011100 00110011 00101010 28 00011101 00010101 00001101 92 01011100 00110011 00101011 29 00011101 00010110 00001101 93 01011101 00110011 00101011 30 00011111 00010110 00001110 94 01011110 00110011 00101011 00101110 00101111 00101111 00101111 00101110 00101110 00101110 00101110 00101101 00101011 00101001 0010001 00010011 000100101 000100101 000100101 000100101 000100101 000100101 000100101 000100101 00010001								
23 00010111 00010010 00001010 87 01010111 00110000 00110001 24 00011001 00010011 00001011 88 01011000 00110001 00101001 25 00011001 00010011 00001011 00001001 89 01011001 00110001 00101001 26 00011010 00010100 00001100 90 01011010 00110010 00101010 27 00011011 00010101 00001100 90 01011010 00110010 00101010 28 00011100 00010101 00001101 92 01011100 00110011 00110011 29 00011101 00010101 00001101 92 01011101 00110011 00101011 29 00011101 00010101 00001101 93 01011101 00110011 00101011 00101011 00001110 00001110 94 01011110 00110011 0010110 0010110 00001110 00001110 95 01011111 00110100 00101100 31 00011111 00001111 00001111 96 0110000 00110100 00101100 32 00100000 00010111 00001111 96 0110000 00110101 001010101							00110000	
24 00011000 00010011 00001011 88 01011000 00110001 0010001 25 00011001 00010011 00001011 89 01011001 00110001 00101001 26 00011010 00011001 00011001 00011001 00011001 00011001 27 00011011 00010100 00001100 90 01011011 00110010 00101010 28 00011101 00010101 00001100 00001100 91 01011011 00110010 00101010 28 00011101 00010101 00001101 92 01011101 00110011 00101011 30 00011101 0011011 00101011 30 00011101 00110111 00101011 30 00011101 0011011 0001011 00001101 93 01011101 00110101 00101010 31 0001111 00001110 00001110 95 01011111 00110100 00101100 32 00100000 00010111 00001110 95 01011111 00110100 00010100 32 00100000 00010111 00001111 96 01100000 00110101 00101101 33 00100001 00010111 00001111 97 01100001 00110101 00101101 33 00100001 00010110 00010000 98 01100010 00110101 00101101 35 00100011 00011000 00010000 98 01100010 00110110 00101101 35 00100011 00011000 00010000 99 01100011 00110110 00101110 36 0010010 00011000 00010000 99 01100011 00110110 00101111 36 0010010 00011000 00010000 00010000 00010011 00110111 00101111 38 0010011 00011001 00010001 100 01100100 00110010					86	01010110	00110000	00101000
24 00011000 00010011 00001011 88 01011000 00110001 00101001			<u> 00010010</u>	00001010	87	01010111	00110000	00101000
25	24		00010011	00001011	88	01011000	00110001	
26 00011010 00010100 00001100 90 01011010 0011010 00101010 27 00011011 00010100 000011001 91 01011011 00110010 00101010 28 00011100 00010101 00001101 92 01011100 00110011 00101011 29 00011101 00010110 00001110 93 01011101 00110011 00101011 30 00011110 00010110 94 01011110 00110100 00101100 31 00011111 00010110 95 01011111 00110100 00101100 32 00100000 0010111 00001111 96 01100000 00101001 33 0010001 000110100 00010000 98 01100010 00110101 34 00100010 00011000 00010000 99 01100011 00110110 00101110 35 00100011 00011000 00010000 99 01100011 00110110 00101110	25	00011001	00010011	00001011				
27 00011011 00010100 00001100 91 01011011 00110010 00101010 28 00011100 00010101 00001101 92 01011100 00110011 0010011 30 00011110 00110011 00101011 30 00011110 00101011 00001101 30 00111101 00110101 00101011 30 00011110 00110110 00001110 94 01011110 00110100 00101100 31 00011111 00010110 00001110 95 01011111 00110100 00101100 32 00100000 00010111 00001111 96 01100000 00110101 00101101 33 00100001 00010111 00001111 96 01100000 00110101 00101101 33 00100001 00010111 00001111 97 01100001 00110101 00101101 34 0010001 00010111 00001111 97 01100001 00110101 00101101 34 0010001 00011000 00010000 98 01100010 00110101 00101101 00101101 35 00100011 00011000 00010000 99 01100011 00110110 00101110 36 00100100 00011000 00010000 99 01100011 00110111 00101111 37 00100101 00011001 00010001 100 00110010 00110111 00101111 37 00100101 00011001 00010001 100 00110010 00110111 00101111 38 00100110 00011001 00010001 100 0110010 00110010 00110010 39 00100111 00011001 0001001 100 1100110 00111000 00110000 40 0010100 00011010 00010010 100 1000111 00111000 00110000 41 00110001 00011010 00010010 104 01101000 00110000 41 00110010 00011011 00010011 105 01101001 00111000 00110001 42 00101010 00011011 00010011 105 0110101 00111001 00110001 44 0010100 00011010 00010100 107 0110101 00111001 00110010 45 0010110 00011110 00010100 107 0110111 00111011 00110010 45 0010110 00011110 00010100 107 0110111 00110010 00110010 48 0011000 00011110 00010100 107 0110111 00111011 00110110 50 00110010 00011010 110 110 00110010 110 00110010 50 00110010 00011010 110 00110010 110 00110010 50 00110010 000110010 110 00110010 00110010 50	26							
28 00011100 00010101 00001101 92 010111100 00110011 00101011 29 000111101 00010101 00001101 93 010111101 00110011 00101011 30 00011110 00001110 94 01011110 00110100 00101100 31 00011111 00001110 00001110 95 01011111 00110100 00101100 32 00100000 00010111 00001111 95 01011111 00110100 00101100 32 00100000 00010111 00001111 96 01100000 00110101 00101101 33 00100001 00010111 00001111 97 01100001 00110101 00101101 34 00100010 00011000 00010000 98 01100010 00110101 00101101 35 00100011 00011000 00010000 99 01100011 00110110 00101110 35 00100011 00011000 00010000 99 01100011 00110110 00101110 36 00100100 00011000 00010000 100 0110010 00110111 00101111 37 0010011 00011001 00010001 100 1000100 100 1001011 00110111 00101111 38 00100110 00011001 00010001 101 01100110			· · · · · · · · · · · · · · · · · · ·					
29 00011101 00010101 00001101 93 01011101 00110011 00101011 30 00011110 00010101 00010101 00010101 00010101 00010100 31 00011111 00010110 00001110 95 01011111 00110100 00101100 32 00100000 00010111 00001111 96 01100000 00110101 00101101 33 0010001 0001111 00001111 96 01100000 00110101 00101101 33 0010001 00011100 00010000 98 01100010 00110101 00101101 35 00100011 00011000 00010000 99 01100011 00110110 00101110 36 0010001 00011000 00010000 99 01100011 00110110 00101110 36 0010010 00011000 00010000 000 0110010 00110111 00101111 37 00100101 00011001 00010000 100 0110010 00110111 00101111 38 0010010 00011001 00010001 101 0110010 00110111 00101111 38 0010011 00011001 00010001 102 0110010 00111010 00110011 00110010 00110000 39 0010011 00011001 00010010 102 0110010 00111000 00110000 40 00101000 00011010 00010010 104 0110101 00111000 00110000 41 00101001 00010011 104 0110101 00111001 00110001 42 00101010 00011011 00010011 104 0110010 00111001 00110001 44 00101010 00011011 00010011 106 0110101 00111010 00110010 45 0010110 00011101 00010101 107 0110011 00110010 45 0010110 00011101 00010101 107 0110011 00111010 00110010 48 00110100 00011101 00010110 110 00110111 00110101 50 00110110 00111011 00110101 50 00110110 00011111 00110110 50 00110110 00111011 00110101 50 00110010 00111011 00110101 50 00110010 00111011 00110101 110 00110101 50 00110010 00111011 00110101 50 00110010 00111011 00110101 50 00110010 00111010 00110010 50 00110010 000110101 110 00110010 110 00110010 50 00110010 00011001 110 00110010 110 00110010 50 00111010 00110010 00110010 110 00110010 00111010 00110010 50 00111010 00110010 0								
30 00011110 00010110 00001110 94 01011110 0011010 00101100 31 00011111 00010110 00001110 95 01011111 00110100 00101100 32 00100000 00010111 00001111 96 01100000 00110101 00101101 33 00100001 00010111 00001111 97 01100001 00110101 00101101 34 00100010 00011000 00010000 98 01100010 0011010 00101101 35 00100011 00011000 00010000 98 01100010 00110110 00101110 36 0010010 00011000 00010000 000 000 000 000 0010010 00110110 00101110 36 0010010 00011000 00010000 000 000 000 0010011 00110110 00101111 37 0010010 00011001 00010000 100 0110010 00110110 00101111 37 0010010 00011001 00010001 101 0110010 0011011 00101111 38 00100110 00011001 00010001 102 0110010 00110111 00101111 38 00100111 00011001 00010001 102 0110010 00110010 00110000 00110000 00110010 00011001 00010010 103 0110011 00111000 00110000 40 00110100 00011010 00011010 00011000 40 00101000 00011010 00011010 000110010 105 01101000 00110000 00110000 41 00101010 00011011 00010011 105 01101010 00111001 00110000 42 00101010 00011011 00010011 105 01101010 00111001 00110010 43 00101011 00011011 00010011 105 01101010 00111001 00110010 44 00101101 00011101 00011010 107 01101011 00111010 00110010 45 00101101 00011101 00010101 109 0110110 00111010 00110010 46 00101110 00011101 00011101 100 0011001 110 00110110 00110010 47 00101111 00011111 00011111 00011111 00011011 100101110 00110101 100101010 10010101 10010101 10010101 10010101 100101010 10010101 100101010								
31 00011111 00010110 00001110 95 01011111 00110100 00101100								
32 00100000 00010111 000011111 96 01100000 00110101 00101101 33 00100010 000101111 000011111 97 01100001 00110101 00101101 34 00100010 00011000 00010000 98 01100010 00110110 00101110 35 00100011 00011000 00010000 99 01100011 00110110 00101110 36 00100100 00011000 00010000 99 01100011 00110110 00101110 36 00100100 00011000 00010000 100 01100100 00110111 00101111 37 00100101 00011001 00010001 101 01100100 00110111 00101111 37 00100110 00011001 00010001 101 01100100 00110111 00101111 38 00100110 00011001 00010001 102 01100110 00110111 00110111 39 00100110 00011001 10010001 102 1100110 00111000 00110000 40 00100110 00011010 00010010 103 01100111 00111000 00110000 41 00101000 00011010 00010010 104 01101000 00111000 00110000 42 0010100 00011011 00010011 106 01101010 00111001 00110001 43 00101011 00011011 00010011 106 01101010 00111001 00110001 43 00101011 00011101 00010100 107 01101011 00111010 00110010 45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101101 00011101 00010101 109 01101110 00111011 00110011 46 00101111 00011101 000101101 10011011 00111011 00111011 00110011								
33 00100001 00010111 000011111 97 01100001 00110101 00101101 34 0010001 00011000 00011000 00010000 98 01100010 00110110 00101110 35 00100011 00011000 00010000 99 01100011 00110110 00101110 36 00100100 00011000 00010000 000 0100010 00110011					95	01011111		00101100
34 00100010 00011000 00010000 98 01100010 00110110 00101110 35 00100011 00011000 00011000 00010000 99 01100011 00110110 00101110 36 00100100 00011000 00010000 000110010 00110011					96	01100000	00110101	00101101
34 00100010 00011000 00010000 98 01100010 00110110 00101110 35 00100011 00011000 00010000 000110001 00110010 00110011			00010111	00001111	97	01100001	00110101	00101101
35 00100101 00011000 00010000 99 01100011 00110110 00101110 36 00100100 00011000 000100001 100 01100100 00110111 00101111 37 00100101 00011001 00010001 101 01100101 00110111 001011111 38 00100110 00011001 00010001 102 01100110 00111000 00110000 39 00100111 00011010 00010010 103 01100111 00111000 00110000 40 00101000 00011010 00010010 103 01100111 00111000 00110000 41 0010000 00011011 00010011 105 01101000 00111000 00110000 41 0010101 00011011 00010011 105 01101010 00111001 00111001 00110001 42 0010101 00011011 00010011 106 01101010 00111001 00110001 43 0010101 00011011 00010011 106 01101010 00111001 00110010 44 00101100 00011100 00010100 107 01101011 00111010 00110010 45 00101101 00011100 00010100 108 01101100 00111010 00110010 45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101110 00011101 00010101 109 01101101 00111011 00110011 47 00101111 00011110 00010101 110 01101111 00111010 00110100 48 00110000 00011111 00010110 111 01101111 00111010 00110100 49 00110010 00011111 00010111 111 01101111 00111010 00110101 50 00110010 00011111 00010111 113 01110000 00111101 00110101 52 00110100 00011111 00010001 115 01110011 00111110 00110111 55 00110110 00100000 00011000 115 01110010 00111111 00110111 55 00110110 00100001 00011001 118 01110110 00111111 00110111 56 00110110 00100001 00110001 110 01100000 00111001 120 01111010 01000000 00111001 120 01111010 01000000 00111001 120 01111010 01000000 00111001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100001 00111001 00100			00011000	00010000	98	01100010	00110110	
36	35	00100011	00011000	00010000	99	01100011	00110110	
37 00100101 00011001 00010001 101 01100101 00110111 00101111 38 00100110 00011001 00010001 102 01100110 00111000 00110000 39 00100111 00011010 00010010 103 01100111 00111000 00110000 40 00101000 00011010 00010010 104 01101000 00111000 00110000 41 0010101 00011011 00010011 105 01101001 00111001 00110001 42 0010101 00011011 00010011 106 01101010 00111001 00110001 43 0010101 00011010 00010100 107 01101011 00111001 00110010 44 00101100 00011100 00010100 107 01101011 00111010 00110010 44 00101100 00011101 00010101 108 01101100 00111011 00110010 45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101110 00011011 109 01101101 00111011 00110011 47 00101111 00011101 00010101 110 01101111 00111101 00110100 48 00110000 00011110 00010110 111 01101111 00111100 00110100 49 00110001 00011111 00010111 112 01110000 00111100 00110100 49 00110001 00011111 00010111 113 01110001 00111101 00110101 50 00110010 00011111 00010111 114 0110011 00111110 00110110 51 00110011 000100111 114 0110011 00111111 00110110 52 00110100 000111111 00010000 00011000 115 01110010 00111111 00110111 54 00110110 00100000 00011000 115 01110010 00111111 001101111 55 00110101 00100000 00011000 116 01110010 01111111 00110111 55 00110110 00100001 00011001 119 01110101 01000000 00111000 57 00111001 00100010 00011001 119 01111001 01000000 00111000 56 00111001 00100010 00011001 120 01111001 01000000 00111000 57 00111001 00100010 00011001 120 01111001 01000000 00111001 59 00111011 00100010 00011001 120 01111001 01000001 00111001 00111001 00100001 00111001 00100001 00111001 0000001 00111001 0000001 00111001 0000001 00111001 0000001 0011	36	00100100	00011000	00010000				
38	37	00100101	00011001	00010001	101			
39	38	00100110	00011001					
40 00101000 00011010 00010010 104 01101000 00111000 00110000 41 00101001 00011011 00010011 105 01101001 00111001 00110001 42 00101010 00011011 00010011 106 01101010 00111001 00110001 43 00101011 00011100 00010100 107 01101011 0011010 00110001 44 00101100 00011100 00010100 108 01101011 0011010 00110010 44 00101101 00011101 00010101 109 01101101 00111010 00110010 45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101110 00011110 00010101 110 01101110 00110011 47 00101111 00011110 111 01101110 00111000 00110100 48 00110000 000111111 00010111 112 01110000								
41 00101001 00011011 00010011 105 01101001 00111001 00110001 42 00101010 00011011 00010011 106 01101010 00111001 00110001 43 00101011 00011100 00010100 107 01101011 00111010 00110010 44 00101100 00011100 00010100 108 01101100 00110010 45 00101101 00011101 00010101 109 01101101 00110010 46 00101110 00011101 0010101 110 01101101 00110011 47 00101111 00011101 011 01101111 00111010 00110100 48 00110000 00011110 0010111 112 01110000 00111100 00110100 49 00110001 00011111 0010111 113 01110001 00111101 00110101 50 00110010 0011111 114 01110010 00111101 00110110 <			00011010					
42 00101010 00011011 00010011 106 01101010 00111001 00110001 43 00101011 00011100 00010100 107 01101011 00111010 00110010 44 00101100 00011100 00010100 108 01101100 00110010 45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101110 00011101 00010101 110 01101110 00111011 00110011 47 00101111 00011110 00010110 111 01101011 00110101 48 00110000 00011110 00010110 112 01110000 00111010 00110100 49 00110001 00011111 00010111 113 01110001 00111010 00110101 50 00110010 00011111 114 01110010 00111110 00110101 51 00110010 00100000 00011000 115 01110011 00111110 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
43 00101011 00011100 00010100 107 01101011 00111010 00110010 44 00101100 00011100 00010100 108 01101100 00111010 00110010 45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101110 00011101 00010101 110 01101101 00111011 00110011 47 00101111 00011110 00010110 111 01101111 00111010 48 00110001 00011110 00010110 112 01110000 00111100 00110100 49 00110001 00011111 00010111 113 01110001 00111101 00110101 50 00110010 00011111 113 01110001 00111101 00110101 51 00110011 00100000 00011000 116 0111001 00111110 00110110 52 00110101 00100000 00011000 116 01110101						·		
44 00101100 00011100 00010100 108 01101100 0011010 00110010 45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101110 00011101 00010101 110 0110110 00110011 47 00101111 00011100 00010110 111 01101110 00111000 48 00110000 00011110 00010110 112 01110000 00111100 00110100 49 00110001 00011111 00010111 113 01110001 00111101 0011010 50 00110010 00011111 00100111 114 01110010 00111101 0011010 51 00110011 00100000 00011000 115 01110011 00110110 00110110 52 00110100 00100000 00011000 116 01110101 00111111 00110110 53 00110101 00100000 00011001 118 01110101								
45 00101101 00011101 00010101 109 01101101 00111011 00110011 46 00101110 00011101 00010101 110 01101110 00110011 00110011 47 00101111 00011110 00010100 111 01101111 0011100 00110100 48 00110000 00011110 00010110 112 01110000 00111100 00110100 49 00110001 00011111 00010111 113 01110001 00111101 00110101 50 00110010 00011111 00010111 114 01110010 00111101 00110101 51 00110011 00100000 00011000 115 01110011 0011110 00110110 52 00110100 00100000 00011000 116 01110101 0011111 00110110 53 00110101 00100000 00011000 117 01110101 00111111 00110111 54 0011011 001000001 00011001 </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
46 00101110 00011101 00010101 110 0110110 0011011 00110011 47 00101111 00011110 00010110 111 01101111 00111010 0011000 48 00110000 00011110 00010110 112 01110000 00111100 00110100 49 00110001 00011111 00010111 113 01110001 0011101 0011010 50 00110010 00011111 00010111 114 01110010 0011101 0011010 51 00110011 00100000 00011000 115 01110011 0011110 0011010 52 00110100 00100000 00011000 116 01110101 00111110 00110110 53 00110101 00100000 00011000 117 01110101 00111111 00110111 54 0011011 00100001 00011001 118 01110110 00111111 00110111 55 00110111 00100001 00011010			00011100					
47 00101111 00011110 00010110 111 01101111 00111100 00110100 48 00110000 00011110 00010110 112 01110000 00111100 00110100 49 00110011 00011111 0010111 113 01110001 00111101 00110101 50 00110010 00011111 0010111 114 01110010 00111101 00110101 51 00110011 00100000 00011000 115 01110011 0011110 00110110 52 00110100 00100000 00011000 116 0111010 00111110 00110110 53 00110101 00100000 00011000 117 01110101 00111111 00110111 54 0011011 00100001 00011001 118 01110110 00111111 00110111 55 00110111 00100001 00011001 119 01110111 01000000 00111000 56 00111001 00100010 00011010 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>00110011</td>								00110011
48 00110000 00011110 00010110 112 01110000 00111100 00110100 49 00110001 00011111 00010111 113 01110001 00111101 00110101 50 00110010 00011111 00010111 114 01110010 00111101 00110101 51 00110011 00100000 00011000 115 01110011 0011110 0011010 52 00110100 00100000 00011000 116 0111010 00111110 00110110 53 00110101 00100000 00011000 117 0111010 00111111 00110111 54 0011011 00100001 00011001 118 0111010 00111111 00110111 55 00110111 00100001 00011001 118 0111011 0100000 00111000 56 00111000 00100010 00011010 120 01111000 0100000 00111000 57 00111001 00100011 00011011	-	00101110					00111011	00110011
48 00110000 00011110 00010110 112 01110000 00111100 00110100 49 00110001 00011111 00010111 113 01110001 00111101 00110101 50 00110010 00011111 00010111 114 01110010 00111101 00110101 51 00110011 00100000 00011000 115 01110011 00111110 00110110 52 00110100 00100000 00011000 116 01110100 00111110 00110110 53 00110101 00100000 00011000 117 01110101 00111111 00110111 54 00110110 00100001 00011001 118 01110110 00111111 00110111 55 00110111 00100001 00011001 119 01110111 01000000 00111000 56 00111000 00100010 00011010 120 01111000 01000000 00111000 57 0011001 00100011 00110101				00010110	111	01101111		00110100
49 00110001 00011111 00010111 113 01110001 00111101 00110101 50 00110010 00011111 00010111 114 01110010 00111101 00110101 51 00110011 00100000 00011000 115 01110011 0011110 0011010 52 00110100 00100000 00011000 116 01110100 0011110 00110110 53 00110101 00100000 00011000 117 01110101 0011111 00110111 54 00110110 00100001 00011001 118 0111010 0011111 00110111 55 00110111 00100001 00011001 119 0111011 0100000 00111000 56 00111000 00100010 00011010 120 01111000 0100000 00111000 57 00111001 00100010 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011		00110000		00010110				
50 00110010 00011111 00010111 114 01110010 00111101 00110101 51 00110011 00100000 00011000 115 01110011 0011110 0011010 52 00110100 00100000 00011000 116 0111010 00111110 00110110 53 00110101 00100000 00011000 117 01110101 00111111 00110111 54 0011011 00100001 00011001 118 01110110 00111111 00110111 55 00110111 00100001 00011001 119 0111011 01000000 00111000 56 00111000 00100010 00011010 120 01111000 01000000 00111000 57 00111001 00100010 00011011 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 <td>49</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>	49							
51 00110011 0010000 00011000 115 01110011 0011110 0011010 52 0011010 0010000 00011000 116 0111010 0011110 0011010 53 0011010 0010000 00011000 117 0111010 0011111 0011011 54 0011011 0010001 00011001 118 0111010 0011111 00110111 55 0011011 0010001 00011001 119 0111011 0100000 0011100 56 0011000 0010010 00011010 120 01111000 0100000 00111000 57 0011001 0010010 00011010 121 01111001 0100000 00111001 58 0011101 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124	50							
52 00110100 00100000 00011000 116 01110100 00111110 00110110 53 00110101 00100000 00011000 117 01110101 00111111 00110111 54 00110110 00100001 00011001 118 01110110 00111111 00110111 55 00110111 00100001 00011001 119 01110111 01000000 00111000 56 00111000 00100010 00011010 120 01111000 01000000 00111000 57 00111001 00100010 00011010 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 001111101 00100101 000111								
53 00110101 00100000 00011000 117 01110101 0011111 00110111 54 00110110 00100001 00011001 118 01110110 00111111 00110111 55 00110111 00100001 00011001 119 01110111 01000000 00111000 56 00111000 00100010 00011010 120 01111000 01000000 00111000 57 00111001 00100010 00011010 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100101 00011100 125 01111101 01000011 00111010 62 00111110 00100101 00011101								
54 00110110 00100001 00011001 118 01110110 00111111 00110111 55 00110111 00100001 00011001 119 01110111 0100000 00111000 56 00111000 00100010 00011010 120 01111000 01000000 00111000 57 00111001 00100010 00011010 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100101 00011100 125 01111101 01000011 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011		00110100						
55 0011011 00100001 00011001 119 01110111 0100000 00111000 56 00111000 00100010 00011010 120 01111000 0100000 00111000 57 00111001 00100010 00011010 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100100 00011100 125 01111101 01000011 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011								
56 00111000 0010010 00011010 120 01111000 0100000 00111000 57 00111001 00100010 00011010 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100100 00011100 125 01111101 01000010 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011								
56 00111000 00100010 00011010 120 01111000 01000000 00111000 57 00111001 00100010 00011010 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 0010100 00011100 124 01111100 01000010 00111010 61 00111101 00100100 00011100 125 01111101 01000010 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011						01110111	01000000	00111000
57 00111001 00100010 00011010 121 01111001 01000000 00111000 58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100100 00011100 125 01111101 01000010 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011	-			00011010	120	01111000	01000000	
58 00111010 00100011 00011011 122 01111010 01000001 00111001 59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100100 00011100 125 01111101 01000010 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011								
59 00111011 00100011 00011011 123 01111011 01000001 00111001 60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100100 00011100 125 01111101 01000010 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011	58		00100011					
60 00111100 00100100 00011100 124 01111100 01000010 00111010 61 00111101 00100100 00011100 125 01111101 01000010 00111010 62 00111110 00100101 00011101 126 01111110 01000011 00111011								
61 00111101 00100100 00011100 125 01111101 01000010 00111010 62 00111110 00100101 000111011 126 01111110 01000011 00111011								
62 00111110 00100101 00011101 126 01111110 01000011 00111011								
62 0044444 00400404 0040041 0041011						01111101		
<u> </u>		00111111						
		00.11111	00100101	00011101	121	U1111111	U1000011	00111011

LEVEL	DBL	Α	В		DBL	Α	В
128	10000000	01000100	00111100	192	11000000	01100010	01011010
129	10000001	01000100	00111100	193	11000001	01100010	01011010
130	10000010	01000101	00111101	194	11000010	01100011	01011011
131	10000011	01000101	00111101	195	11000011	01100011	01011011
132	10000100	01000110	00111110	196	11000100	01100100	01011100
133	10000101	01000110	00111110	197	11000101	01100100	01011100
134	10000110	01000111	00111111	198	11000110	01100101	01011101
135	10000111	01000111					
			00111111	199	11000111	01100101	01011101
136	10001000	01001000	01000000	200	11001000	01100110	01011110
137	10001001	01001000	01000000	201	11001001	01100110	01011110
138	10001010	01001000	01000000	202	11001010	01100111	01011111
139	10001011	01001001	01000001	203	11001011	01100111	01011111
140	10001100	01001001	01000001	204	11001100	01101000	01100000
141	10001101	01001010	01000010	205	11001101	01101000	01100000
142	10001110	01001010	01000010	206	11001110	01101000	01100000
143	10001111	01001011	01000011	207	11001111	01101001	
							01100001
144	10010000	01001011	01000011	_208	11010000	01101001	01100001
145	10010001	01001100	01000100	209	11010001	01101010	01100010
146	10010010	01001100	01000100	210	11010010	01101010	01100010
147	10010011	01001101	01000101	211	11010011	01101011	01100011
148	10010100	01001101	01000101	212	11010100	01101011	01100011
149	10010101	01001110	01000110	213	11010101	01101100	01100111
150	10010101	01001110	01000110	214			
					11010110	01101100	01100100
151	10010111	01001111	01000111	215	11010111	01101101	01100101
152	10011000	01001111	01000111	216	11011000	01101101	01100101
153	10011001	01010000	01001000	217	11011001	01101110	01100110
154	10011010	01010000	01001000	218	11011010	01101110	01100110
155	10011011	01010000	01001000	219	11011011	01101111	01100111
156	10011100	01010001	01001001	220	11011100	01101111	01100111
157	10011101	01001001	01001001	221	11011101	01110000	01101000
158	10011110	01001010	01001010	222	11011110	01110000	01101000
159							
	10011111	01001010	01001010	223	11011111	01110000	01101000
160	10100000	01001011	01001011	224	11100000	01110001	01101001
161	10100001	01001011	01001011	225	11100001	01110001	01101001
162	10100010	01001100	01001100	226	11100010	01110010	01101010
163	10100011	01001100	01001100	227	11100011	01110010	01101010
164	10100100	01001101	01001101	228	11100100	01110011	01101011
165	10100101	01001101	01001101	229	11100101	01110011	01101011
166	10100110	01001110	01001110	230	11100110	01110100	01101100
167	10100111	01010110	01001110	231	11100111	01110100	01101100
168	10101000	01010111					
			01001111	232	11101000	01110101	01101101
169	10101001	01010111	01001111	233	11101001	01110101	01101101
170	10101010	01011000	01010000	234	11101010	01110110	01101110
171	10101011	01011000	01010000	235	11101011	01110110	01101110
172	10101100	01011000	01010000	236	11101100	01110111	01101111
173	10101101	01011001	01010001	237	11101101	01110111	01101111
174	10101110	01011001	01010001	238	11101110	01111000	01110000
175		01011010	01010010	239	11101111	01111000	01110000
176		01011010	01010010	240	11110000		
				•——		01111000	01110001
177		01011011	01010011	241	11110001	01111001	01110010
178	10110010	01011011	01010011	242	11110010	01111001	01110011
179		01011100	01010100	243	11110011	01111010	01110100
180	10110100	01011100	01010100	244	11110100	01111010	01110101
181	10110101	01011101	01010101	245	11110101	01111011	01110110
182		01011101	01010101	246	11110110	01111011	01110111
183	10110111	01011110	01010110	247	11110111	01111100	01111000
184		01011110	01010110	248	11111000	01111100	01111001
		01011110					
185			01010111	249	11111001	01111101	01111010
186		01011111	01010111	250	11111010	01111101	01111011
187		01100000	01011000	251	11111011	01111110	01111100
188		01100000	01011000	252	11111100	01111110	01111101
189	10111101	01100000	01011000	253	11111101	01111111	01111110
190	10111110	01100001	01011001	254	11111110	01111111	01111111
191		01100001	01011001	255	1111111	10000000	10000000
<u> </u>							




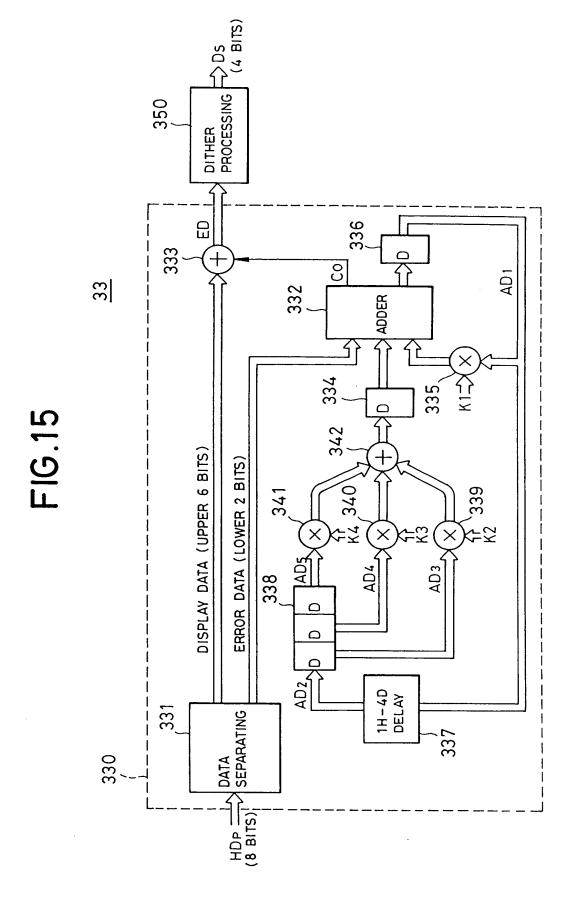


FIG.16

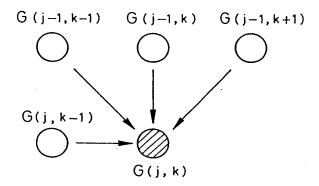

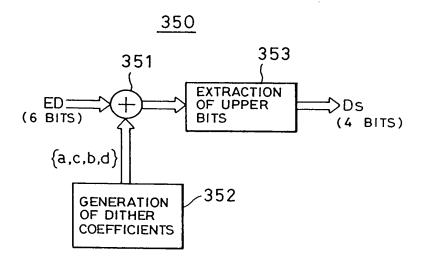

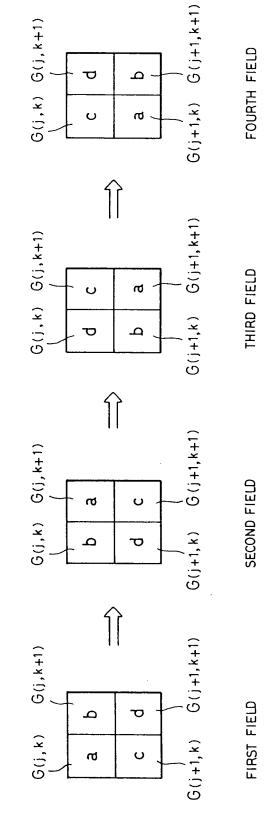



F1G.19

SION											
LIGHT-EMISSION BRIGHTNESS		LB	0	_	7	23	47	82	128	185	255
LIGH)	LA	0	က	4	8	2	104	155	218	0 255
		SF 8									0
		SF SF 7 8							lacktriangle	\bigcirc	
		SF 6							\circ	\bigcirc	
	7-	SF 5						\bigcirc	\circ	\bigcirc	
	SION	SF 4					\bigcirc	0	0	0	
	LIGHT-EMISSION DRIVE PATTERN				•	\circ	0	0	0	0	
	HT-E VE P	SF SF 2 3			0	0	0	0	0	0	
	LIG PR	SF 1		\circ	0	\circ	\bigcirc	0	0	\circ	
		8	0	0	0	0	0	0	0	-	0
		7	0	0	0	0	0	0		0	0
		9	0	0	0	0	0	~	0	0	0
	웊	2	0	0	0	0	~	0	0	0	0
	I	4	0	0	0	₹-	0	0	0	0	0
<u>8</u>		က	0	0	_	0	0	0	0	0	0
ASI		7	0		0	0	0	0	0	0	0
H H		~	_	0	0	0	0	0	0	0	0
SELECTIVE ERASING	ć	ŝ	0000	0001	0010	0011	0100	0101	0110	0111	1000
SEL)	-	7	က	4	5	9	7	8	6
	- LI	GRAI SCALE									

BLACK CIRCLES : SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES : LIGHT-EMITTING STATE



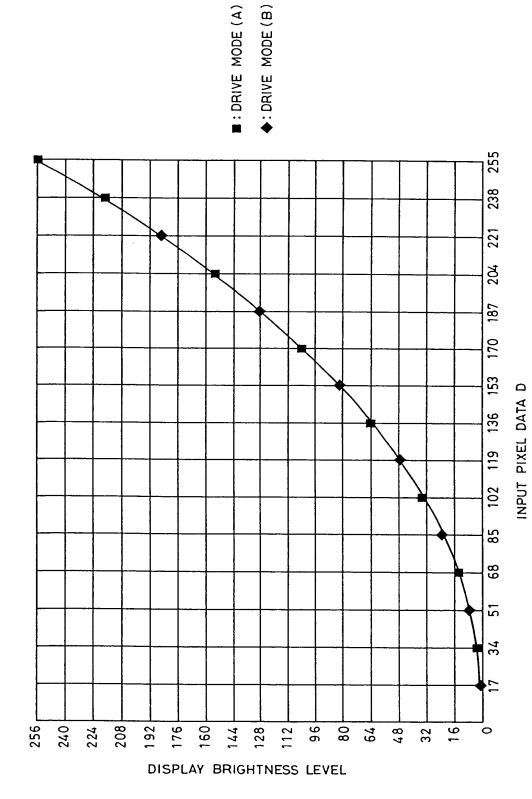

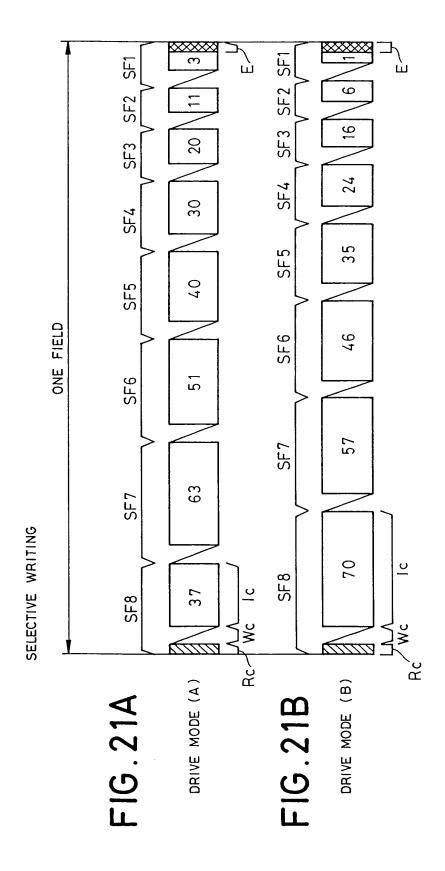

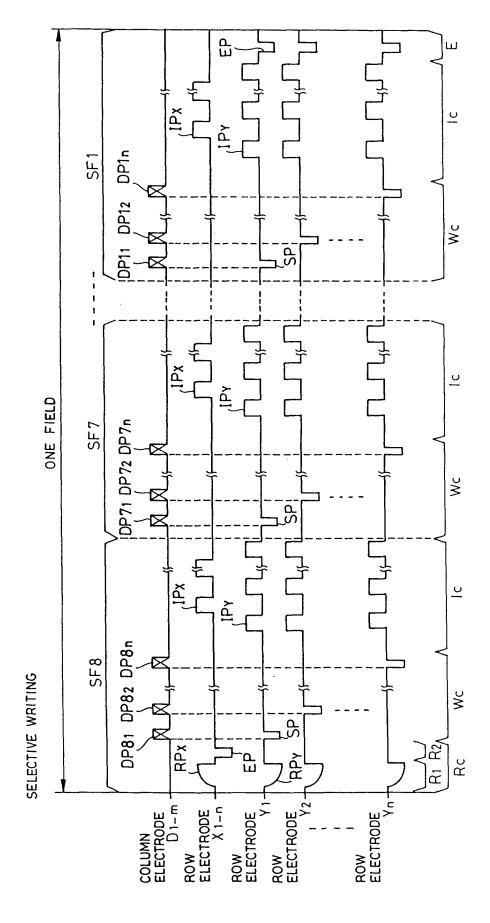



FIG. 22


FIG.23


	LIGHT-EMISSION BRIGHTNESS										
	(LB	0	_	7	23	47	82	128	185	255
		LA	0	က	4	8	22	104	155	218	255
	HT-EMISSION VE PATTERN	8 7 6 5 4 3 2 1		•	•	•	000	0000	00000	000000	0000000
		1	0		0	0	0	0	0	0	0
		2	0	0	•	0	0	0	0	0	0
		3	0	0	0	_	0	0	0	0	0
	웃	4	0	0	0	0		0	0	0	0
		5	0	0	0	0	0	~-	0	0	0
S N		9	0	0	0	0	0	0	_	0	0
RITI		7	0	0	0	0	0	0	0		
∑		8	0	0	0	0	0	0	0	0	-
SELECTIVE WRITING	Ds		0000	0001	0010	0011	0100	0101	0110	0111	1000
SEL)		_	2	ဗ	4	5	9	7	æ	6
	GRAY SCALE										


BLACK CIRCLES : SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES : LIGHT-EMITTING STATE




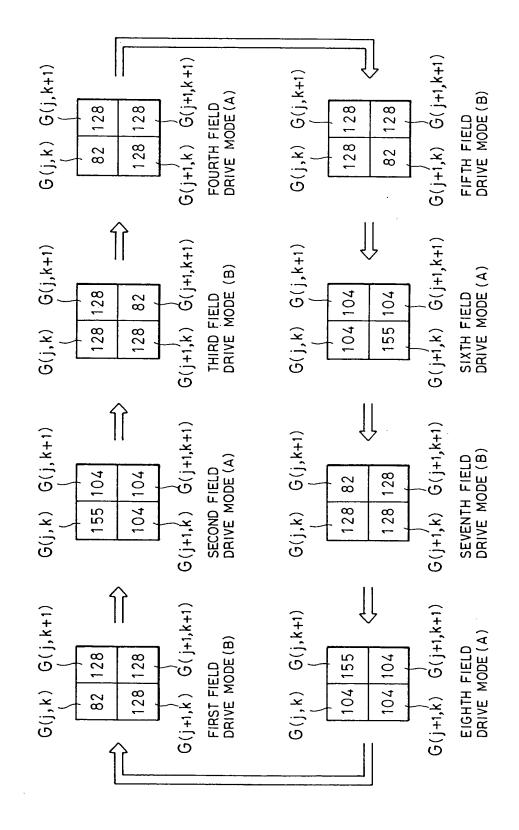


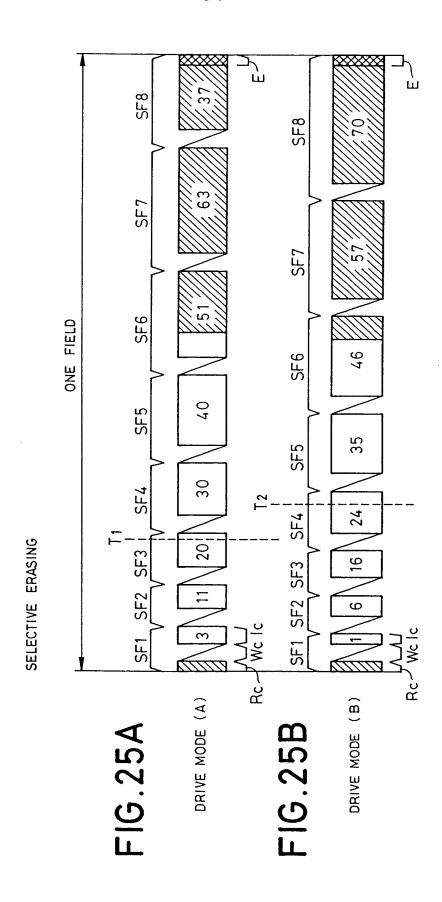

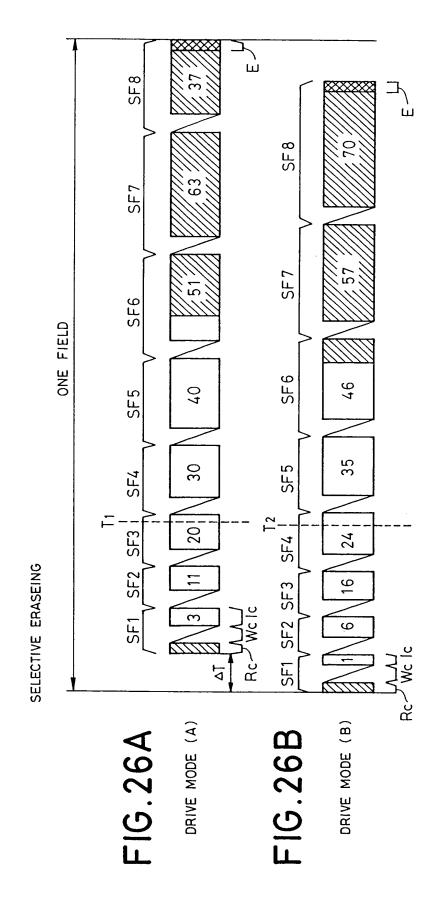

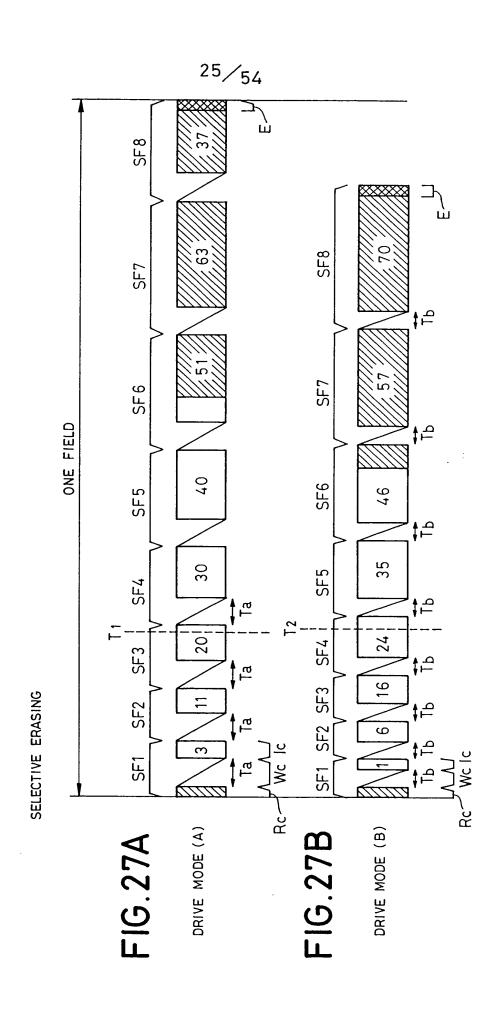

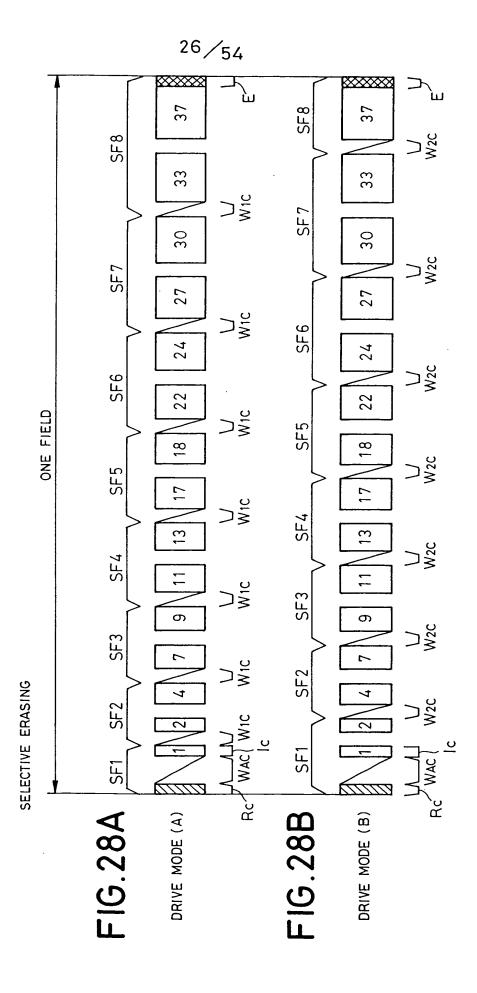

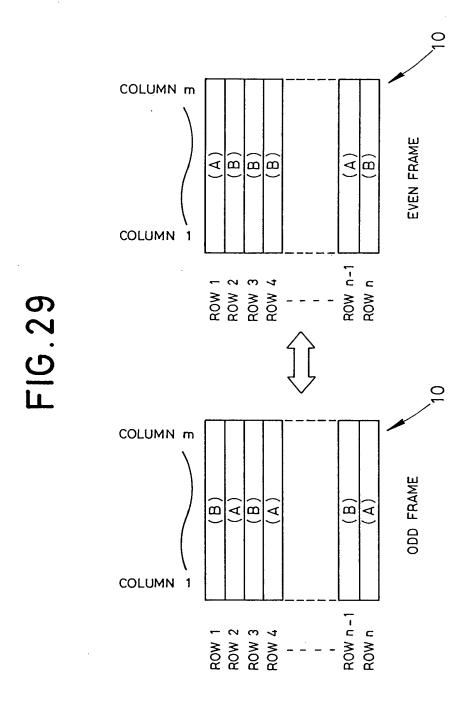

SELECTIVE ERASING

LIGHT-EMISSION BRIGHTNESS			•								
		LB	0		7	23	47	82	128	185	255
		LA	0	က	14	34	22	104	155	218	0 0 255 255
	C.	5 ∞	\triangleleft	\triangleleft	\triangleleft	\triangleleft	\triangleleft	\triangleleft	•	•	0
	Ç,	<u>,</u> ~	\triangleleft	\triangleleft	\triangleleft	\triangleleft	\triangleleft			\circ	0
	Ų.	5 ဟ	\triangleleft	\triangleleft	\triangleleft	\triangleleft		lacktriangle	\circ	\circ	0
2 7	C.	3	\triangleleft	\triangleleft	\triangleleft			\circ	\circ	\bigcirc	\bigcirc
LIGHT-EMISSION DRIVE PATTERN	Ľ.	4	\triangleleft	\triangleleft		lacktriangle	\circ	\circ	\circ	\bigcirc	Ö
EMIS PAT	AC. AC.	; ო	\triangleleft	lacktriangle	lacktriangle	\circ	\circ	\circ	\circ	\bigcirc	0
HT.	Ľ,	5			\circ	\circ	\bigcirc	\bigcirc	\bigcirc	\bigcirc	0
E E	Ľ,	;		0	0	0	0	\circ	0	\bigcirc	0
		8	*	*	*	*	*	*	-	_	0
		7	*	*	*	*	*	_	~	0	0
		9	*	*	*	*	-		0	0	0
皇		2	*	*	*	_	~	0	0	0	0
I		4	*	*	~	_	0	0	0	0	0
		2 3 4	*	←	~	0	0	0	0	0	0
•		7	-	_	0	0	0	0	0	0	0
		-	-	0	0	0	0	0	0	0	0
ć	3		0000	0001	0010	0011	0100	0101	0110	0111	1000


BLACK CIRCLES : SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES : LIGHT-EMITTING STATE

FIG. 31

SELECTIVE WRITING

LIGHT-EMISSION BRIGHTNESS										
(LB	0	_	7	23	47	82	128	185	255
	LA	0	က	14	g	64	104	155	0 218	O 255
Jo.	6 5 4 3 2 1		•	•	0	0	0	\circ	_	0
Ü	2 9					0	0	0	0	0
0	ှ် က						0	0	0	0
N N	2 4							0	0	0
SSIC	ှ လ							•	0	0
-EMI	5 ဖ								•	0
LIGHT-EMISSION DRIVE PATTERN	8 7									
		_								*
	7	0		~-	*	*	*	*	*	
	2	0	0	~	-	*	*	*	*	*
	က	0	0	0	_	_	*	*	*	*
모	4	0	0	0	0	~	~	*	*	*
_	5	0	0	0	0	0	_	~-	*	*
	9	0	0	0	0	0	0	~	←	*
	7	0	0	0	0	0	0	0	_	Ψ-
	8	0	0	0	0	0	0	0	0	~
Ds		0000	0001	0010	0011	0100	0101	0110	0111	1000
		<u> </u>					-			

BLACK CIRCLES : SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES : LIGHT-EMITTING STATE

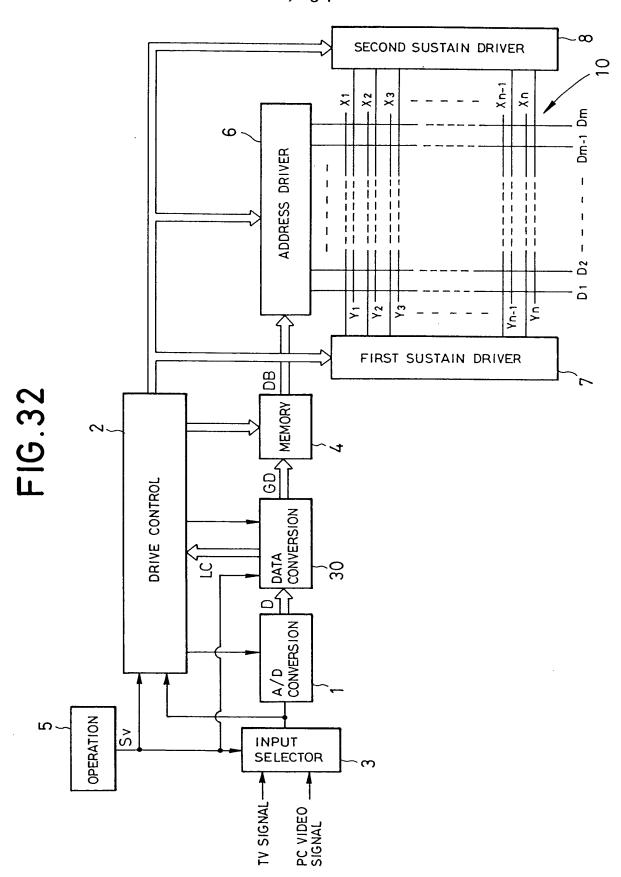

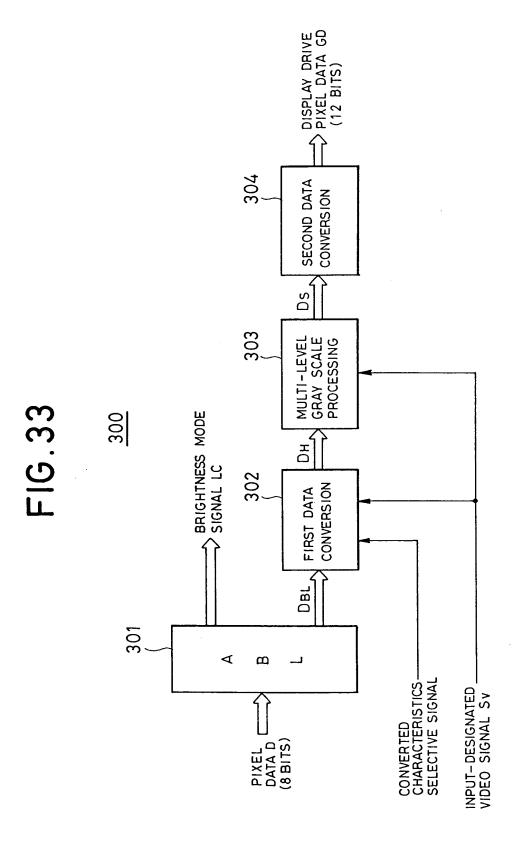


FIG.34

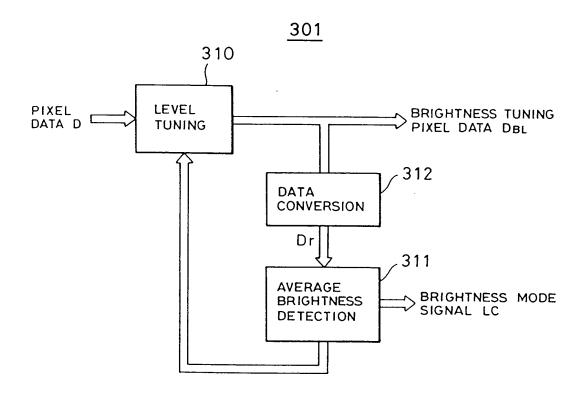
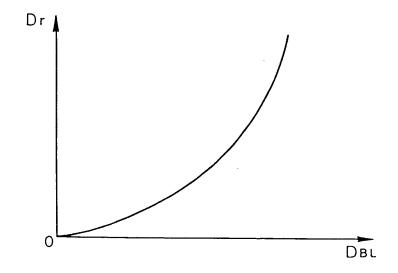


FIG.35



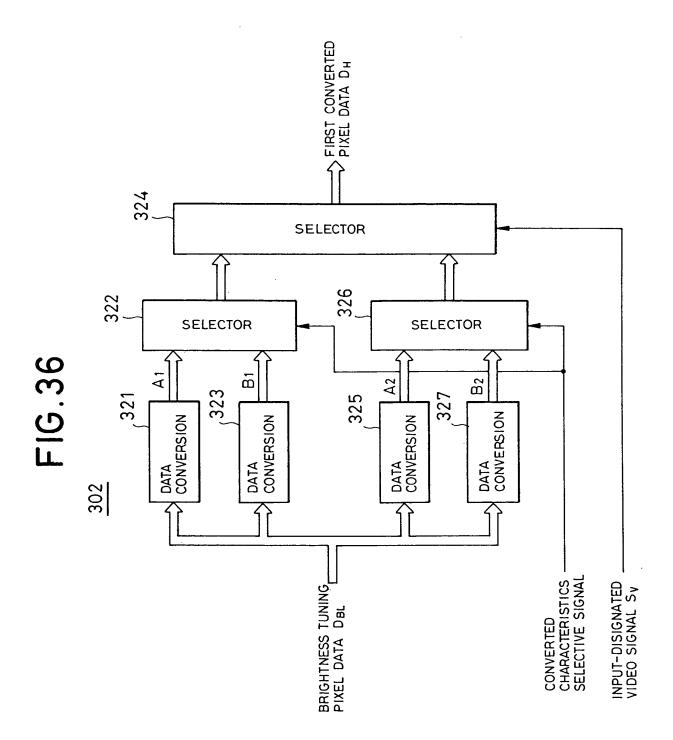


FIG.37A

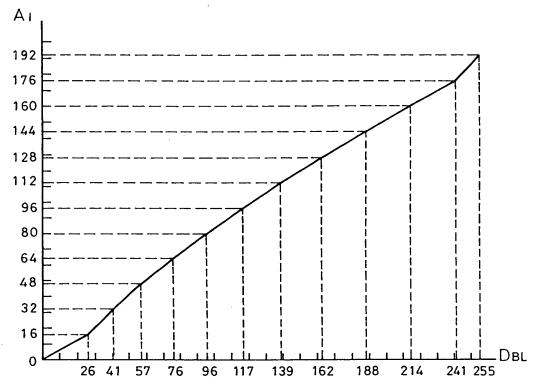
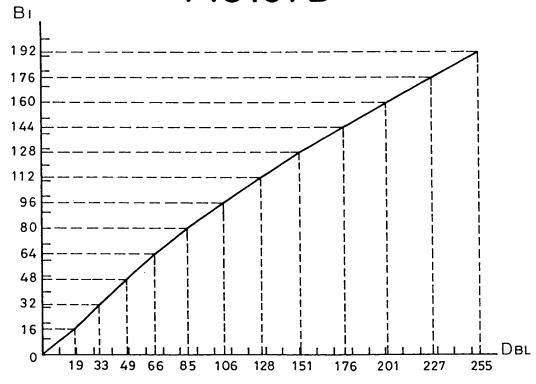
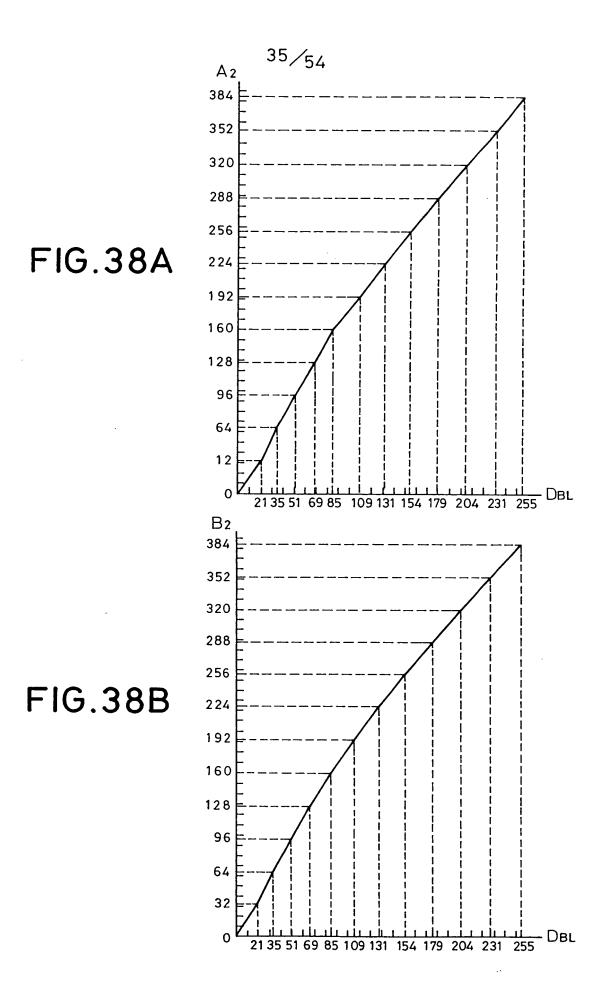


FIG.37B





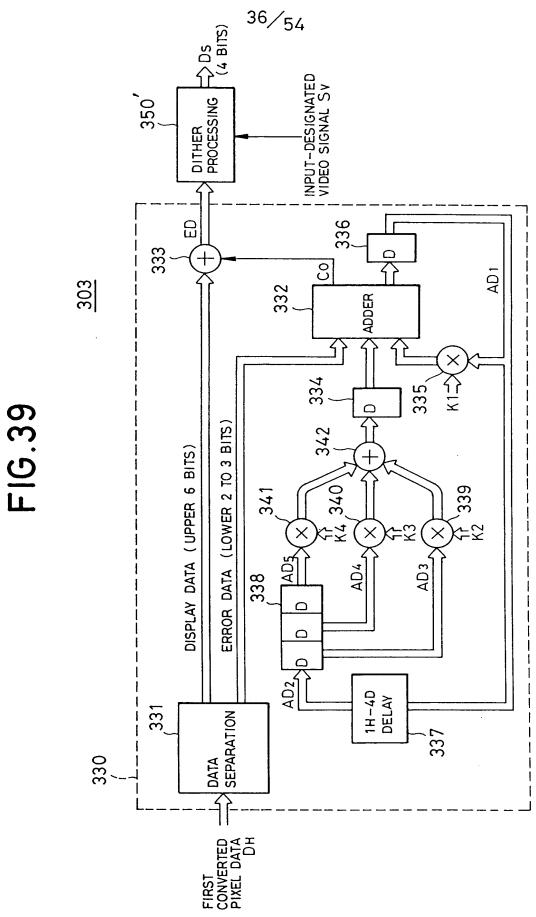


FIG. 40

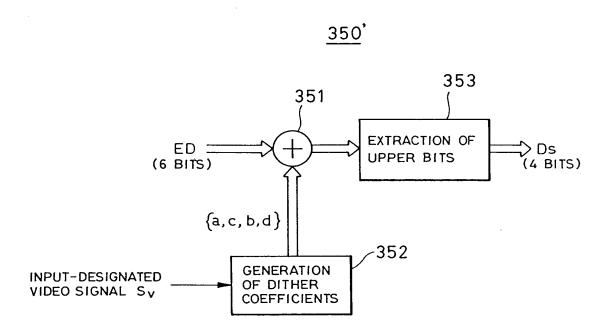


FIG. 41

INPUT VIDEO SIGNAL	DITH	IER COEFF	ICIENT	
VIDEO SIGNAL	a	ь	С	đ
TV SIGNAL	0	1	2	3
PC VIDEO SIGNAL	0 (1)	2 (3)	4 (5)	6 (7)

FIG. 42

SELECTIVE ERASING

-	-																					۱						l	
_	CONVERSION TABLE OF THE SECOND DATA CONVERTER	RSIC	N	ABL	E OF	王王	E SE	CON	0 0	4TA	CON	VER.	TER													DISPI	AY BI	DISPLAY BRIGHTNESS	NESS
													8	FIG	HT-E	LIGHT-EMISSION DRIVE PATTERN	NOIS	DRI	VEF	λΑΤΤ	ER				L	2		PC · VIE	PC · VIDEO
	Š						U	ල						Ü	L		ü		U L		L L	Ц	O L	U U	ָ ה ה		ء ر	5 -	ء ا <u>۔</u> - اب
	2	_	7	က	4	2	9	7	8	6	10	11	12	<u>5</u> —	2	3		5		70						ODD	EVEN	ODD	EVEN
-	0000	_	0	0	0	0	0	0	0	0	0	0	0	•												0	0	0	0
7	0001	0	←	0	0	0	0	0	0	0	0	0	0	0	•											7		_	-
က	0010	0	0	₹	0	0	0	0	0	0	0	0	0	0	0	•										4	က	က	ო
4	0011	0	0	0	~	0	0	0	0	0	0	0	0	0	0	Ō	•									10	7	7	7
S.	0100	0	0	0	0	~	0	0	0	0	0	0	0	0	0	Ō	0									18	13	4	13
9	1010	0	0	0	0	0	_	0	0	0	0	0	0	0	0	Ō	\tilde{O}	$\overline{\bigcirc}$								29	23	25	23
7	0110	0	0	0	0	0	0	τ-	0	0	0	0	0	0	0	Ō	0	$\tilde{\bigcirc}$	$\overline{\bigcirc}$						- , , - , -	46	37	33	37
æ	0111	0	0	0	0	0	0	0	_	0	0	0	0	0	0	Ō	\tilde{O}	$\tilde{\bigcirc}$	$\tilde{\bigcirc}$	$\overline{\bigcirc}$					·····	89	56	29	26
თ	1000	0	0	0	0	0	0	0	0	_	0	0	0	0	0	Ŏ	\tilde{O}	$\tilde{\bigcirc}$	$\tilde{\bigcirc}$	$\tilde{\Box}$	$\overline{\bigcirc}$			•		96	81	8	81
10	1001	0	0	0	0	0	0	0	0	0	_	0	0	0	0	Ŏ	$\tilde{\circ}$	$\tilde{\bigcirc}$	$\tilde{\bigcirc}$	$\tilde{\Box}$	$\widetilde{\bigcirc}$					131	112	117	112
11	1010	0	0	0	0	0	0	0	0	0	0	_	0	0	0	Ŏ	$\tilde{0}$	$\tilde{\bigcirc}$	$\tilde{\bigcirc}$	$\tilde{\Box}$	$\tilde{\bigcirc}$	\bigcirc				174	151	157	151
12	1011	0	0	0	0	0	0	0	0	0	0	0	-	0	0	Ŏ	$\tilde{0}$	$\widetilde{\bigcirc}$	$\widetilde{\bigcirc}$	\bigcirc	$\tilde{}$	\bigcirc	\bigcirc		<u>``</u>	225	198	205	198
13	1100	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		0	$\overline{\bigcirc}$		\tilde{a}					255	255	255	255

BLACK CIRCLES: SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES: LIGHT-EMITTING STATE

FIG. 43

FIG.44A

/ /၁၂	SF1	SF2	SF3	SF4	SF5	SF6	SF2 SF3 SF4 SF5 SF6 SF7 SF8 SF9 SF10 SF11 SF12	SF8	SF9	SF10	SF11	SF12
MODE 1 2	2	2	9	ω	8 11 17 22	17		28	35	35 43 51	51	30
MODE 2	7	7	4 12 16 22	16	22	34 44	77	26	0/	70 86 102 60	102	09
MODE 3	9	9		18 24 33		51 66	,	84	105	105 129 153	153	9.0
MODE 4	ω	ω	24	32	77	68	88 112 140 172 203 120	112	140	172	203	120

ODD FIELD (A)

FIG. 44B

/ပ 	SF1	SF2	SF3	SF4	SF5	SF6	SF5 SF6 SF7	SF8	SF9	SF9 SF10 SF11	SF11	SF12
MODE 1	-	2	7	9	10	14	10 14 19 25	25	31	39	47	57
MODE 2	2	7	8	12	20	28	38	50	62	78	94	114
MODE 3	ო	9	12 18	18	30	4.2	22	75	93	117 141		171
MODE 4	7	8	16 24	24	07	99	9/	100 124		156	188	228

EVEN FIELD (B)

FIG. 45A


\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	SF1	SF1 SF2 SF3 SF4 SF5 SF6 SF7 SF8 SF9 SF10 SF11 SF12	SF3	SF4	SF5	SF6	SF7	SF8	SF9	SF10	SF11	SF12
MODE 1	,	2	7	7	7 11 14 20	14		25	33	07	48	20
MODE 2	2	7	4 8 14 22	14	l i	28 40		50	99	80	96	100
MODE 3	m	ဖ	12	21	33	3 42	09	75	66	99 120 144 150	144	150
MODE 4	7	ω	16	28	77	99	80	100	132	100 132 160 192	192	200

ODD FIELD (A)

FIG.45B

\ \/\o_	SF1	SF1 SF2 SF3 SF4 SF5 SF6 SF7 SF8 SF9 SF10 SF11	SF3	SF4	SF5	SF6	SF7	SF8	SF9	SF10		SF12
MODE 1	-	2	9 7	9	10	10 14 19 25	19	25	31	39	47	57
MODE 2	2	7	8	12	20	28	38	20	62	78	94	114
MODE 3	က	9	12 18		30	4.2	57	75	93 117 141 171	117	141	171
MODE 4	7	8	16	16 24 40	07	26	76	100	76 100 124 156	156	188 228	228

EVEN FIELD (B)

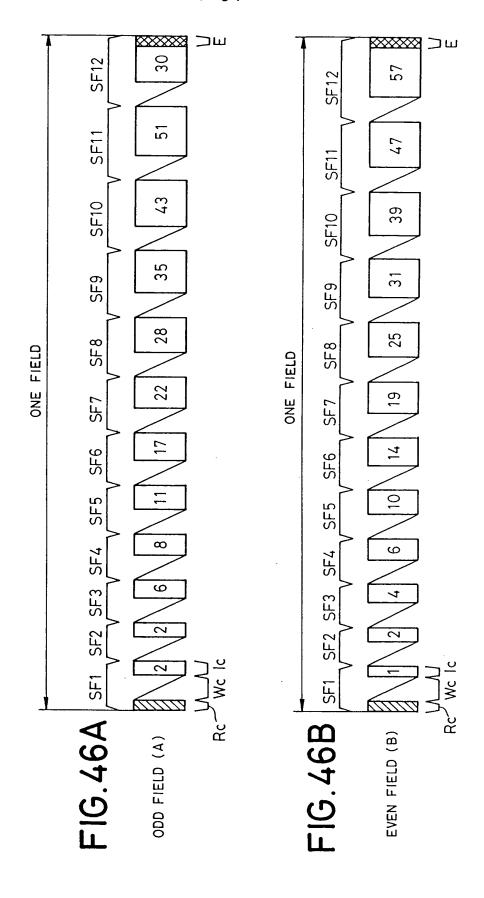


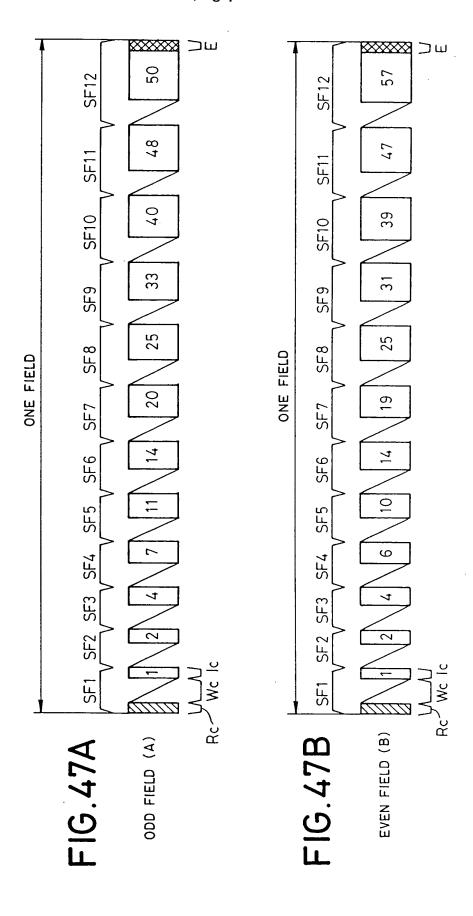



FIG. 48

DISPLAY BRIGHTNESS

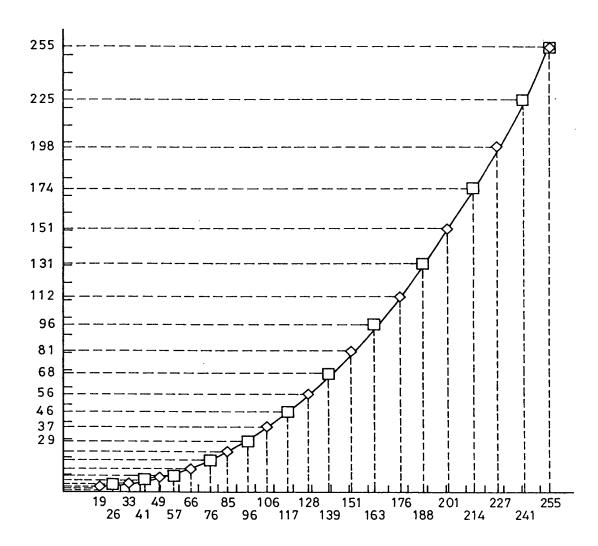

□: (A)


♦ : (B)

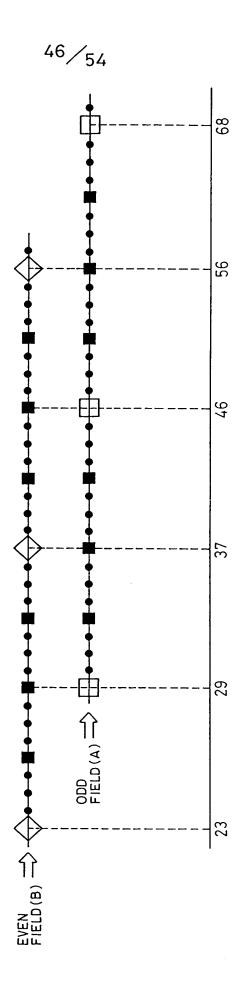

DISPLAY BRIGHTNESS LEVEL

FIG. 49


FIG. 50

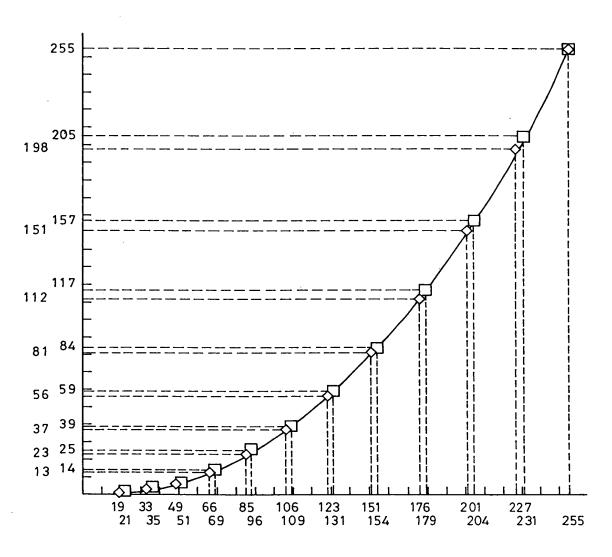


□: (A)


♦: (B)




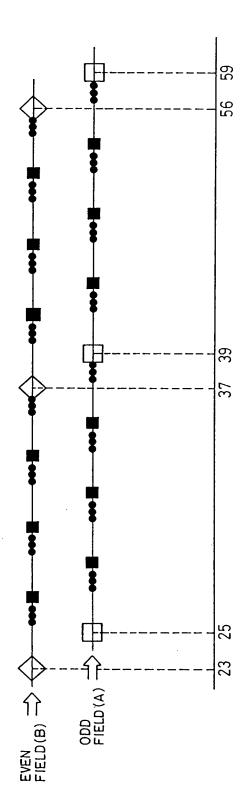

DISPLAY BRIGHTNESS LEVEL

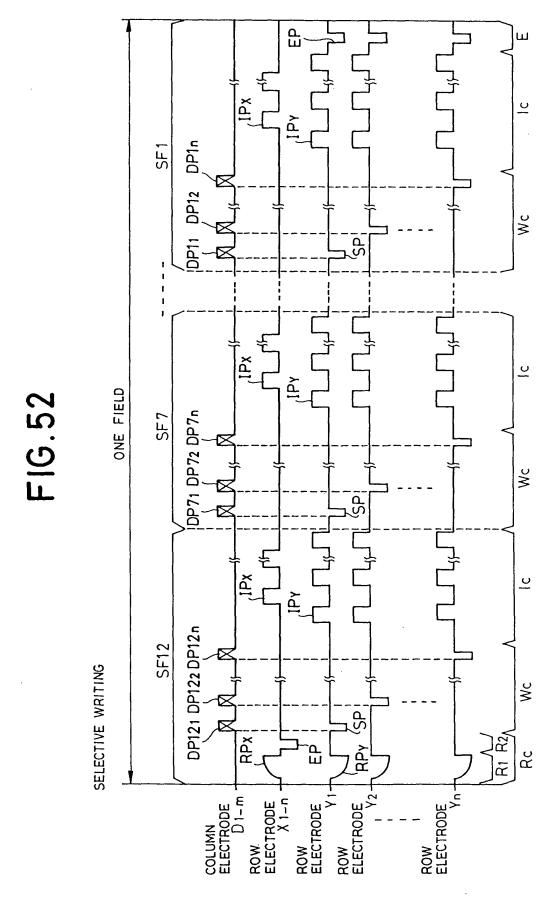

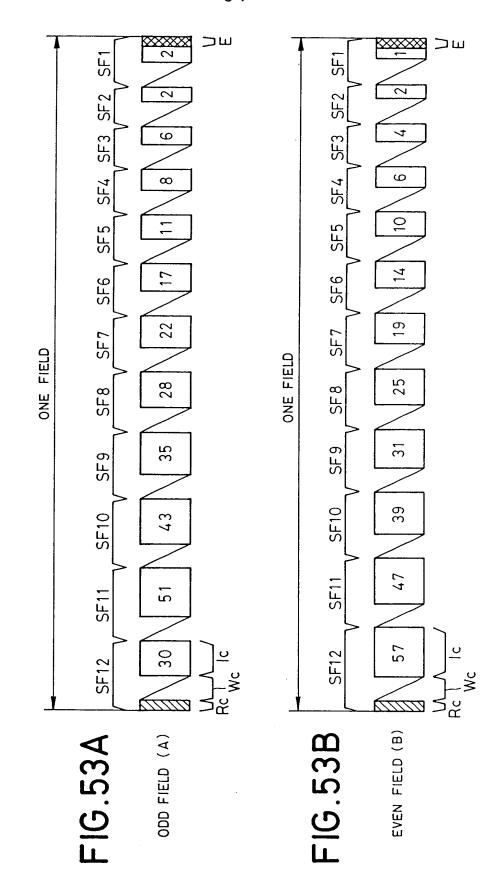

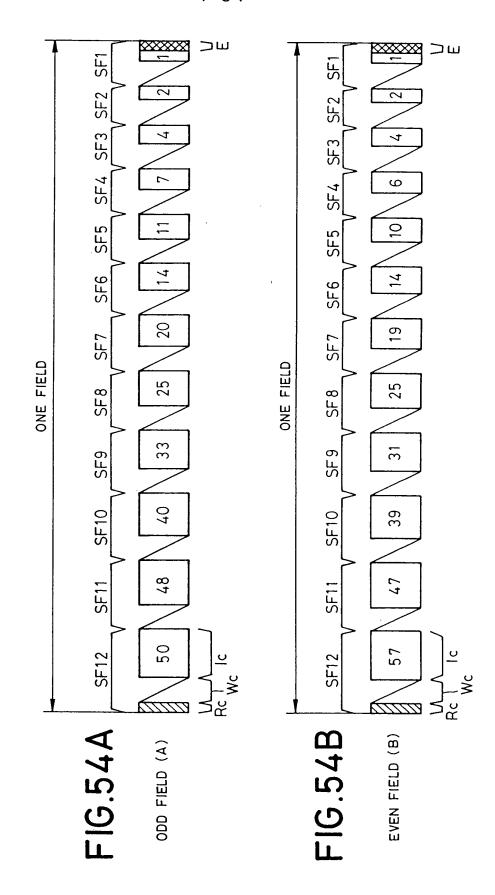

F16.55

SELECTIVE WRITING

GRAY SCALE	A	ш																											
CONVERSION TABLE OF THE SECON	ER	(0	NOI	TAB	LE 0	F TH	IE SE	NO ::	Ď Ū	4TA	D DATA CONVERTER	VER	핊						Ì							DISP	DISPLAY BRIGHTNESS	RIGH	INES:
		ı											8		HTE	LIGHT-EMISSION DRIVE PATTERN	SION	DR	VEF	λAΤΤ	ËŖ	_				≥		PC	PC · VIDEO
č								GD						;	!										l	SIGNAL	¥	SIGNAL	\$
12	12	~	11	10	6 (æ	7	9	5	4	က	7	-	4 2 2	₹ 7	가	ე	2 م م	₹ ~	ည္က	ج 5	4 4	3 8	SF. 2	٦ ۲	LA ODD	L'B EVEN	LA	EVEN
0 0000	0		0	0	0	0	0	0	0	0	0	0	0													0	0	0	0
0001 0		_	0	0	0	0	0	0	0	0	0	0	~												•	7	-	-	_
0010 0		_	0	0	0	0	0	0	0	0	0	-	0												0	4	က	ო	ო
0011 0		_	0	0	0	0	0	0	0	0	←	0	0											\tilde{O}	0	10	7	7	7
0100 0		_	0	0	0	0	0	0	0	~	0	0	0										$\hat{\bigcirc}$	\hat{O}	\bigcirc	18	<u>6</u>	14	13
0101 0		_	0	0	0	0	0	0	←	0	0	0	0									$\tilde{\bigcirc}$	\tilde{O}	\tilde{O}	\bigcirc	29	23	25	23
0110 0		_	0	0	0	0	0	۴	0	0	0	0	0								$\tilde{\bigcirc}$	$\tilde{\Box}$	\bigcirc	\circ	\bigcirc	46	37	39	37
0111 0		_	0	0	0	0	~	0	0	0	0	0	0							$\tilde{\bigcirc}$	$\tilde{\bigcirc}$	$\tilde{\Box}$	$\overline{\bigcirc}$	\hat{O}	$\overline{\bigcirc}$	89	26	29	56
1000		\circ	0	0	0	-	0	0	0	0	0	0	0						$\hat{\Box}$	$\tilde{\Box}$	$\tilde{\bigcirc}$	$\hat{\Box}$	$\hat{\Box}$	\hat{O}	$\overline{\bigcirc}$	96	81	\$	81
1001		0	0	0	~	0	0	0	0	0	0	0	0			•	•	$\overline{\bigcirc}$	$\overline{\bigcirc}$	$\tilde{\Box}$	$\tilde{\bigcirc}$	$\overline{\bigcirc}$	$\tilde{\bigcirc}$	$\overline{\bigcirc}$	\bigcirc	131	112	117	112
1010		0	0	~	0	0	0	0	0	0	0	0	0			•	\tilde{O}	$\overline{\bigcirc}$	$\overline{\bigcirc}$	$\overline{\bigcirc}$	$\overline{\bigcirc}$	$\overline{\bigcirc}$	$\tilde{\bigcirc}$	\overline{C}	\bigcirc	174	151	157	151
1011 (0	-	0	0	0	0	0	0	0	0	0	0			0	\hat{O}	$\overline{\bigcirc}$	\bigcirc	\overline{C}	$\tilde{\Box}$	\overline{C}	$\tilde{\bigcirc}$	$\overline{\bigcirc}$	\bigcirc	225	198	205	198
1100	-		0	0	0	0	0	0	0	0	0	0	0	•	Ō	0	\hat{O}	$\tilde{\Box}$	$\overline{\bigcirc}$	\overline{C}	\tilde{O}	\circ	$\hat{\Box}$	\circ	\bigcirc	255	255	255	255
	ı	1																											

BLACK CIRCLES : SELECTIVE WRITE DISCHARGE (LIGHT-EMITTING STATE)
WHITE CIRCLES : LIGHT-EMITTING SF

FIG.56

ELECTIVE ERASING	CTIVE ERASII

•	
i	Ш
	_
	2
•	Q
	Ö,
)	>
1	⋖
	α

_	CONVERSION TABLE OF THE SECOND DATA CONVERTER	ERSI	NO	TABL	Щ	F T	E SE	CON	10 D/	ATA (SON	/ER1	ER							İ					۵	ISPLA	DISPLAY BRIGHTNESS	GHT	VESS
_													8	2	보는	LIGHT-EMISSION DRIVE PATTERN	NOIS	R	VE P	ATT	ERN				≥	>		PC · V	PC · VIDEO
							C	כ																	ळ	SIGNAL		SIGNAL	귤
	SO	_	C	C	•	L	,	۲ ۲	c	C	(7	Ç	SF,	٦ م		1.												LB
			7	20	4	n	اه	-	pا	מ	2		7.	-	7	ص	4	۵	٥	-	σ	ה ה	10	11	12 0	ODD	EVEN	ago	EVEN
-	0000		~	*	*	*	*	*	*	*	*	*	*		•	Ì	ď	√		√ ⊲	7	7	7 <	7	_ <1	0	0	0	0
2	0001	0	_	~	*	*	*	*	*	*	*	*	*	0	•		\ \d	\langle	7	7	7 🗸	7 🗸	7	\triangleleft	<u></u>	7	-	~	Ψ-
က	0010	0	0	_	_	*	*	*	*	*	*	*	*	0	0	•		<u>\</u>	1	7	7	7	7 0	7 0	<u> </u>	4	က	က	က
4	0011	0	0	0	_	~	*	*	*	*	*	*	*	0	0	Ō		•	1	7	7	7	7	7 0	7	10		7	7
5	0100	0	0	0	0	_	←	*	*	*	*	*	*	\circ	0	Ō	Ō		~	7	7	7	7 0	7 \	7	18	13	14	13
9	0101	0	0	0	0	0	~	_	*	*	*	*	*	0	0	Ō	\tilde{O}			7	7	7	7 🗸	7 0	\bigcirc	53	23	25	23
7	0110	.0	0	0	0	0	0	←		*	*	*	*	0	0	Ō	\tilde{O}	$\tilde{\bigcirc}$	$\overline{\bigcirc}$		7	7 <	7 🗸	7	$\frac{\triangleleft}{4}$	46	37	39	37
8	0111	0	0	0	0	0	0	0		_	*	*	*	0	0	Ō	\tilde{O}	$\tilde{\bigcirc}$	$\tilde{\bigcirc}$			7	7	\triangleleft	<u>9</u> ⊲	89	26	59	26
တ	1000	0	0	0	0	0	0	0	0	~	_	*	*	0	0	Ŏ	\tilde{O}	$\tilde{\bigcirc}$	$\tilde{\Box}$	\bigcirc			7	\triangleleft		96	81	84	81
10	1001	0	0	0	0	0	0	0	0	0	_	₹-	*	0	0	Ŏ	\tilde{O}	$\widetilde{\bigcirc}$	$\tilde{\Box}$	\bigcirc				7	<u>₹</u>	131 1	112	117	112
1	1010	0	0	0	0	0	0	0	0	0	0	-	~	0	0	Ŏ	\tilde{O}	$\overline{\bigcirc}$	\bigcirc	\bigcirc						174 1	151	157	151
12	1011	0	0	0	0	0	0	0	0	0	0	0	~	0	0	\tilde{O}	$\tilde{\Box}$	\bigcirc							22	225 1	198	205	198
13	1100	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		0	\circ		0		00	0		255 2	255	255	255

BLACK CIRCLES : SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES : LIGHT-EMITTING SF

	•
L)
٣)
	-
ட	

GRAT SCALE																							-					
S	CONVERSION TABLE OF THE SECONI	SIOI	ΑΤN	BLE (OF T	HE S	ECC	QN(DAT/	D DATA CONVERTER	NVEF	REF													DISI	'LAY	DISPLAY BRIGHTNESS	TNES
												8		GHT	¥.	LIGHT-EMISSION DRIVE PATTERN	JNC	ZK S	E PA	E	S.				≥		PC.	PC · VIDEO
(כי																		SIGNAL	¥Γ	SIGNAL	¥.
	 	τ-	7	ر س	4	5) 9	_	ω ω	9 10	0 11	1 12	SF 12	SF 11	유 다	F SF 0	F SF	F SF	R S B	F SF	: 8 4	R S E	F SF	SF.	LA	LB	LA	EVEN
0000	ļ	0	0	0		0	0		0	0	0	0													0			0
0001		0	0	0	0	0	0	<u> </u>	0	0	0	_													7	-	-	-
0010		0	0	0	0	0	0	0	0	0	_	~-												•	4	ო	. ო	<u>ო</u>
0011		ο.	0	0	0	0	0		0	7	~	*												\triangleright	9	_		_
0100		0	0	0	0	0	0	_	1	_	*	*													18	13	4	13
0101	91 (0	0	0	0	0	0		_	*	*	*											> >	\triangleright	29	23	25	23
0110		0	0	0	0	0	,_	,	*	*	*	*										✓	>	\triangleright	46	37	33	37
0111		0	0	0	0	0		_	* *	*	*	*								✓		⊳	\triangleright	\triangleright	99	26	29	26
1000		0	0	0	,		-	*	* *	*	*	*								\triangleright		✓	> >	\triangleright	96	8	8	8
1001		0	0	`		*	*		* *	*	*	*							∨	\triangleright	\triangleright	>	> >	\triangleright	131	112	117	112
1010		0	0	· —	~	*	*	*	* *	*	*	*						>	✓		\triangleright	>	>	\triangleright	174	151	157	151
1011		0	_	<u>~</u>	**	* *	*	<u>~</u> ∡	* *	*	*	*					✓		\triangleright	\triangleright	\triangleright	\triangleright	\triangleright	\triangleright	225	198	205	198
1100	00	τ-		- X	-X	*		7 +	* *	*	→	4													r C	, ,		